

# Operation Manual

---

**KUST Elektronik GmbH**  
**PT5040**

---

**Impulse Winding Tester**

---

KUST Elektronik GmbH  
Am Weinberg 2  
D-35619 Braunfels  
Germany

info@kust-elektronik.com  
P: +49 (0) 64414471223

# Contents

Chapter 1 Overview .....	1-1
Production introduction .....	1-2
Operation environment .....	1-3
Power supply.....	1-3
Environment temperature and humidity .....	1-3
Warm-up .....	1-3
Dimensions and weight.....	1-3
Chapter 2 General specifications .....	2-1
Specifications.....	2-1
Comparison methods .....	2-2
Area size comparison.....	2-2
Differential area comparison.....	2-2
Corona discharge comparison.....	2-3
Differential phase comparison .....	2-4
Chapter 3 : Panels and display .....	3-1
Front panel .....	3-1
Rear panel .....	3-4
Introduction to display area .....	3-5
Chapter 4 Introduction to [DISP].....	4-1
Measurement display page.....	4-1
Introduction to symbols in measurement display page.....	4-1
Introduction to soft keys in measurement display page.....	4-1
Standard sampling.....	4-2
Compare.....	4-3
Measure.....	4-4
Utility.....	4-5
Statistics .....	4-5
Modify .....	4-5
Chapter 5 Introduction to [SETUP] .....	5-1
Introduction to icons of soft keys.....	5-1
Measurement setup page.....	5-1
Winding Type (only for Multi-channel instrument).....	5-2
Working Mode (only for Multi-channel instrument) .....	5-2
Std Mode (only for Multi-channel instrument).....	5-3
Test Winding (only for Multi-channel instrument).....	5-3
Curr Winding (only for Multi-channel instrument) .....	5-3
Imp Volt .....	5-4
Sample .....	5-4
Test Imp .....	5-4
Erase Imp .....	5-4
Volt ADJ.....	5-4

Wave Disp.....	5-5
Trig Mode .....	5-5
Delay Time.....	5-6
BDV Test .....	5-6
Start Volt .....	5-6
End Volt .....	5-6
Volt Step.....	5-7
Comparator .....	5-7
Position (AREA SIZE, DIFF ZONE, PHASE DIFF) .....	5-7
Position (PHASE DIFF) .....	5-7
DIFF (Limit) ( AREA SIZE, DIFF ZONE, PHASE DIFF) .....	5-7
DIFF (Limit) ( CORONA) .....	5-8
Int. File .....	5-8
Ext. File .....	5-10
Chapter 6 Introduction to [SYSTEM].....	6-12
System .....	6-12
Brightness .....	6-13
Pass/Fail.....	6-13
Pass Alarm .....	6-13
Fail Alarm .....	6-13
Key Sound.....	6-13
Hard Copy.....	6-13
Password.....	6-13
Language.....	6-14
Theme .....	6-14
Date.....	6-14
Time .....	6-14
I/O Interface.....	6-14
I/O .....	6-15
PT50xx RS232C interface .....	6-15
USB interface.....	6-17
LAN interface .....	6-20
About .....	6-22
Chapter 7 User guide .....	7-1
Use of keys .....	7-1
Switch the display page .....	7-1
Basic measurement .....	7-1
Non-standard test .....	7-1
Sample test for standard wave .....	7-1
BDV test .....	7-2
Technology application.....	7-2
Test objects .....	7-2

Select comparison method .....	7-3
Settings of comparison method.....	7-3
Select standards.....	7-4
Chart for differential area.....	7-4
Chapter 8 Command reference .....	8-1
Command structure.....	8-1
Data format .....	8-3
Notation conventions and definitions .....	8-3
Command reference .....	8-4
DISPlay subsystem commands .....	8-4
Measure Function subsystem commands.....	8-7
COMParator subsystem commands .....	8-8
Impulse VOLTage subsystem commands .....	8-13
Sample RATE subsystem commands.....	8-16
Standard WAVE subsystem commands.....	8-17
Wave Adjust subsystem commands .....	8-19
STATistic subsystem commands.....	8-20
MWINding subsystem commands .....	8-21
TRIGger subsystem commands .....	8-24
FETCh ? subsystem commands.....	8-25
MEASure subsystem commands .....	8-27
ABORt subsystem command.....	8-28
Mass MEMory subsystem commands .....	8-28
Local Control subsystem commands .....	8-29
Common commands .....	8-29
Error and warning message.....	8-31
Chapter 9 Handler interface .....	9-2
Basic information.....	9-2
Electrical characteristics .....	9-3
DC isolated output .....	9-3
Isolated input.....	9-4
Jumper setup on HANDLER interface .....	9-5
Chapter 10 Package contents and warranty .....	10-1
Package contents.....	10-1
Warranty 10-1	

# Chapter 1 Overview

Thank you for your Choosing one of our products. Before the use of it, please locate the items listed in this manual to ensure nothing is missing. If in the case that any item is missing, please contact us immediately.

It is necessary to read this manual carefully before your proper use of PT50xx series impulse winding tester.

## Warning!

### Operation

Do not put heavy objects on the tester.

There is a cooling fan on the rear side of this instrument, so any block of the air inlet is prohibited.

### Rigid power input

The stability of high voltage depends on stable power input. Be sure to provide rated AC power or corrected power.

### Grounding

For the safety of personnel and instrument, ensure the grounding terminal, designed in power cord, be grounded correctly.

### Test cable

To avoid electrical shock hazard, do not touch test terminals and test samples. The reason is that a high voltage test cable is connected to the rear panel of this instrument, thus when testing, the cable and test samples connected will carry a high voltage.

### DO NOT open case unauthorized!

To avoid the injury to personnel and damage to the instrument, do not open the case unauthorized due to the existence of high voltage in instrument.

### Carry or move

Before moving the instrument, unplug the AC power sockets and remove high voltage test line or external control line.

### Maintenance

In non-use state, the instrument should be covered with a plastic or cloth cover. To clean the tester, wipe the dirty parts with a soft cloth soaked with diluted neutral detergent. Do not use the following chemicals to clean the instrument: diluent, benzene or organic solvent with similar chemical property with above materials.

### Location

Do not locate the instrument in the environment of high temperature, direct sunlight or

poor ventilation. In addition, the instrument will generate high voltage, so it must be used at room temperature and in the absence of much dust.

## Production introduction

Due to the influence of wire material, magnetic material, framework and manufacture technics, winding products such as transformers, motor windings may have defects of low insulation between winding layers, circles and leads. PT50xx series impulse winding tester, adopting high-speed sampling techniques, is a new test instrument for insulation performance of winding products.

PT50xx series compares the standard waveform stored in the non-volatile memory with the current tested waveform. PT50xx series provides the PASS or FAIL comparison result according to AREA SIZE, DIFFERENTIAL AREA, CORONA DISCHARGE or DIFFERENTIAL PHASE. With its strong functions, accurate comparison methods, easy operation and various interfaces, PT50xx can provide a perfect test solution for most winding products.

### Principles of impulse winding test

The impulse winding tester tests the electrical characteristics of coil winding without damaging the DUT. The prerequisite condition is to test the quality of a coil at just a glance. The detection is carried out when the same electric impulse, as used in the standard coil and here discharged by a capacitor, is applied to the DUT. The voltage attenuation wave is generated in response to the impulse, related to the Q-factor and inductance of the coil. In this sense, the tester can detect turn and layer short, the differences in the number of turns and the material of the core. If high impulse voltage is applied, the poor insulation will appear as a corona or layer discharge.

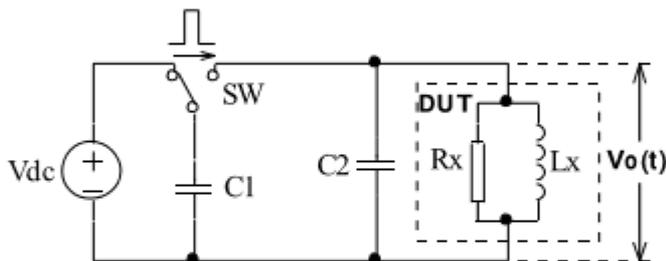


Figure 1-1 Simplified diagram for principles of impulse winding test

In figure 1-2, the self-oscillation attenuation wave has a close relation with the inductance  $L$  and quality factor  $Q$ , while  $L$  and  $Q$  depend on the number of turn, manufacture technology, properties of iron core material and whether it has air-coils. What's more, the applied voltage is a high impulse voltage, thus, it is easy to observe the short circuit, partial short turns and lays or turns discharge phenomenon caused by insulation damage.

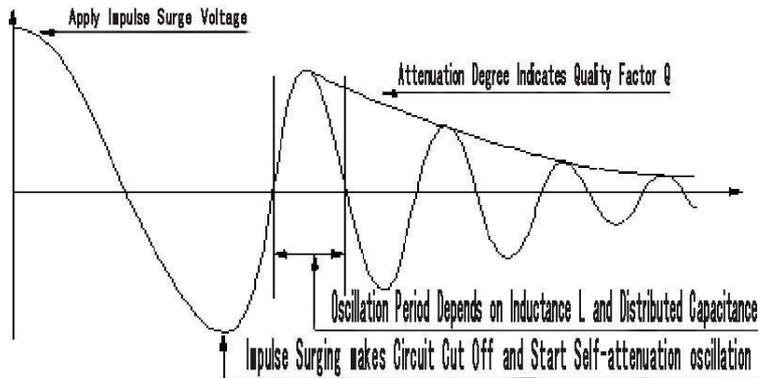


Figure 1-2 Typical self-attenuation oscillation wave

## Operation environment

### Power supply

Voltage: 198V-242V AC, 99V-121V AC

Power frequency: 47.5Hz-63Hz

Consumption:  $\leq 50\text{VA}$

### Environment temperature and humidity

Normal working temperature:  $0^{\circ}\text{C}\sim 40^{\circ}\text{C}$ , Humidity:  $\leq 90\%\text{RH}$

Referential working temperature:  $20^{\circ}\text{C}\pm 8^{\circ}\text{C}$ , Humidity:  $\leq 80\%\text{RH}$

Transferring environment temperature:  $0^{\circ}\text{C}\sim 50^{\circ}\text{C}$ , Humidity:  $\leq 93\%\text{RH}$

### Warm-up

The warm-up time should not be less than 15 minutes.

### Dimensions and weight

Dimensions (W\*H\*D): 398mm $\times$ 129mm $\times$ 370mm

Weight: Approx. 6kg

# Chapter 2 General specifications

## Specifications

Specifications	PT5020	PT5030
Output for impulse voltage	100V~3000V 10V steps 5%±1.0V	100V~5000V 10V steps 5%±2.0V
Inductance test range	>10μH	>10μH
Impulse energy	Max 250milli-Joules	Max 250 milli-Joules
Contents in waveform display area on LCD	800×480 dot-matrix LCD 256×650 dot-matrix Setup parameters, standard wave and test wave, comparison result, file information, etc.	
Sample wave	Sampling rate: 200MSPS, 100MSPS, 50MSPS, 20MSPS, 10MSPS, 5MSPS, 2MSPS, 1MSPS, 500kMSPS, 200kMSPS, 100kMSPS Resolution: 8bits Sampling point: 6500bytes	
Standard wave sample	Sequential cycle, single cycle, one sample (up to 32 times of sample averaging)	
Input impedance	10MΩ	
Test speed	6 times/sec	
Averaging rate	Number of test impulse	1 to 32 averaging rate programmable
	Number of demagnetizing impulse	0 to 16 averaging rate programmable
Measurement function	Voltage, time and frequency	
Trigger mode	Internal, Manual (Foot), External and Bus	
Comparison method	AreaSize Comparison DiffZone Comparison Corona Comparison PhaseDiff Comparison	
Area size measurement accuracy	±1%	
Area difference measurement accuracy	±1%	
Comparison output	OK/NG display	

	Beeper alarm
Beep mode	ON (adjust for high and low tone), OFF
Memory	Built-in memory: 100 files USB disk memory
Interface	HANDLER (START, STOP, PASS, NG, BUSY, EOC, etc.) RS232C    USB Device    USB Host    LAN

## Comparison methods

### Area size comparison

As shown in figure 2-1, when comparison method is set to AREA SIZE, the area sizes of both standard waveform and the tested waveform are calculated (integration method) between A and B. The percent deviation is the ratio of the area size difference to the area size of the standard waveform between A and B, expressed as a percentage.

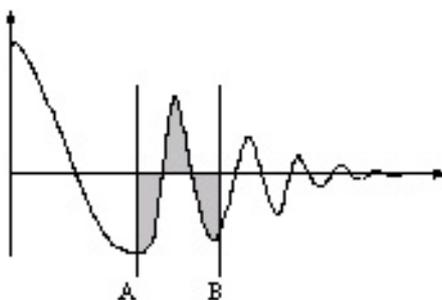


Figure 2-1 Area Size Comparison

The area size of the waveform is nearly proportional to the energy loss in the winding. When a sample winding has a short circuit between layers, the short circuit area is reflected as an increase of energy loss.

### Differential area comparison

When comparison method is set to Differential Area, PT50xx calculates the area size of differential portion between the standard waveform and the tested waveform from A to B. (The differential portion area size is indicated as the shaded part in Figure 2-2.) The percent deviation is the ratio of the differential portion area size to the area size of the standard waveform between A and B, expressed as a percentage.

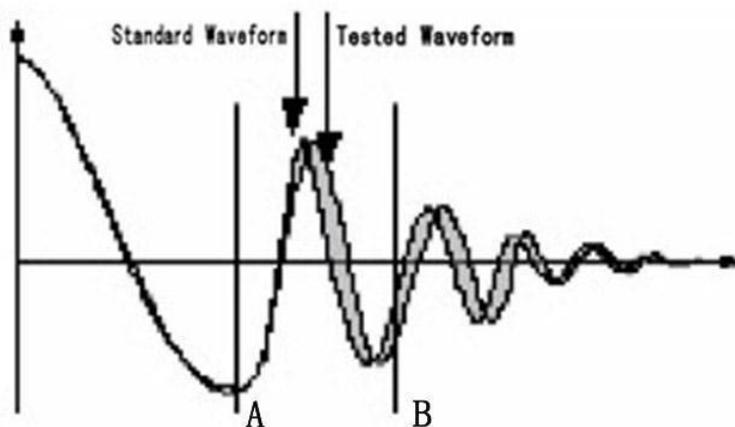


Figure 2-2 Differential Area Comparison

The differential area size reflects the value of inductance and total energy loss. This method is especially effective to detect the differences of inductance  $L$  between the standard winding and the tested winding.

## Corona discharge comparison

When comparison method is set to Corona Discharge, PT50xx detects the high frequency energy of corona discharge from A to B as shown in Figure 2-3. When the corona evaluation value is less than the corona difference limit, then the comparison result will be PASS. When the corona evaluation value is more than the corona difference limit, then the comparison result will be FAIL. The corona evaluation value and difference limit are both expressed as an integer.

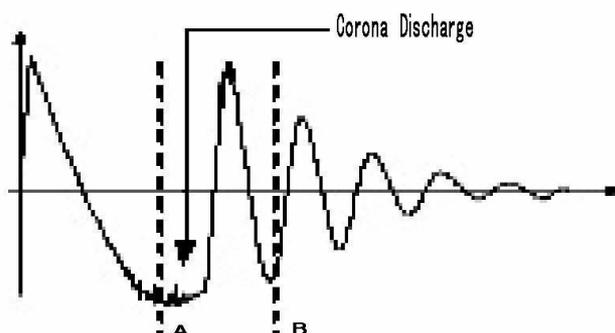


Figure 2-3 Corona Discharge Comparison

User can sample some coil samples (e.g. 10 samples) to set an effective corona discharge value. First, applying an impulse voltage to each coil will gain the corona discharge value of each coil. Then, a new effective value can be set by adding 20% to the maximum corona discharge value. In order to ensure the correctness of the new value, user can test these coils once more and observe the corona PASS or FAIL.

## Differential phase comparison

User can specify a zero-crossing point to compare. The instrument will judge the zero-crossing offset between the tested waveform and standard waveform and then compare the oscillation period between the two waveforms. The percentage of the two values will be taken as the judging criterion and the reference is set by percentage. As is shown in figure 2-4, A~B is the offset and C~D is the oscillation period of standard waveform. The third zero-crossing point of the compared waveform is to set.


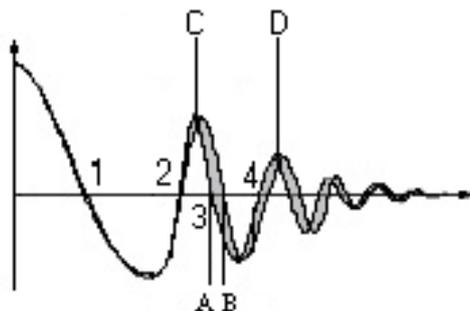


Figure 2-4 Phase Differential Comparison

**NOTE:** The tester can only set zero-crossing points from 2 to 10. The first zero-crossing point cannot reflect the actual performance of coils, so it is not necessary to set the first point. In real phase differential comparison, there are four results generated: PASS, FAIL, FAIL1 and FAIL2. PASS is up to standard; FAIL, below standard. While FAIL1 means the zero-crossing point has not been found, that is to say, it is unable to find the set zero-crossing point on the waveform of the tested coil; FAIL2 indicates that a complete period cannot be found on the standard waveform. As shown in figure2-4, the third zero-crossing point must be present in the waveform so as to ensure the normal operation of phase differential comparison.

# Chapter 3: Panels and display

## Front panel

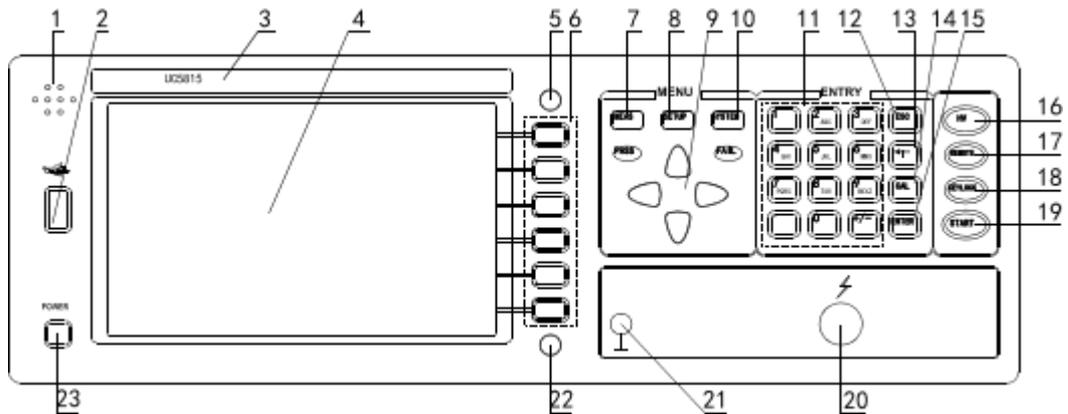


Serial Number	Name	Instruction
1	Buzzer window	
2	USB HOST interface	Connect U flash disk so as to save or use a specified file
3	Brand and model	
4	LCD	840×480 Large-Scale dot-matrix LCD displays measurement waveform, set parameters, system configurations, etc.
5	FILE	Press this key to enter into the file setup page
6	SOFTKEY	Six soft keys are used to select parameters. The corresponding function of each soft key has been displayed on its left (the right part of LCD). The function definition varies with different pages
7	[DISP]	Press this key to enter into the display page of test.
8	[SETUP]	Press this key to enter into the Measure setup page .

9	CURSOR	Cursor key is used to select cursor between zone and zone on LCD display page. When cursor moves to some zone, the zone displays with reverse on LCD.
10	[SYSTEM]	Press this key to enter into the system setup page.
11	Numerical keys	These keys are used to input data to the instrument. The key consists of numerical keys [0] to [9], decimal point [.] and [+/-] key
12	ESC	<b>ESC</b> key is used to cancel the enter of numbers or characters.
13	BACKSPACE	The function of <b>BACKSPACE</b> key is to delete numbers or characters wrongly entered.
14	[CAL]	Execute the calibration operation. Press this key to statistic Page.
15	ENTER	ENTER key terminates numeric input data and enters the displayed value on the data input line (bottom line of the LCD screen).
16	HV	High Voltage Indicator indicates that the instrument is outputting dangerous impulse test voltage to the HV terminal on the front panel. Do not touch test terminals or DUT.
17	Remote	remote control
18	[KEYLOCK]	Press [KEYLOCK], it will be lighted, which means the function of current panel is locked. Press it again, it will be off, which means discharging the lock status. If the password function is ON, it means correct password is necessary when discharging the key-lock, or the key cannot be unlocked.
19	START	Press the <b>START</b> key to start a measurement. In the process of test, pressing the key will terminate the measurement.
20	High voltage terminal	Output high voltage.
21	Ground terminal	Low terminal for high voltage test, connecting to a test fixture and DUT with 16.

22	PrtSc	Capture the screen information
23	POWER	Switch on or off the main power

Table 3-1 Front panel instruction


## Rear panel

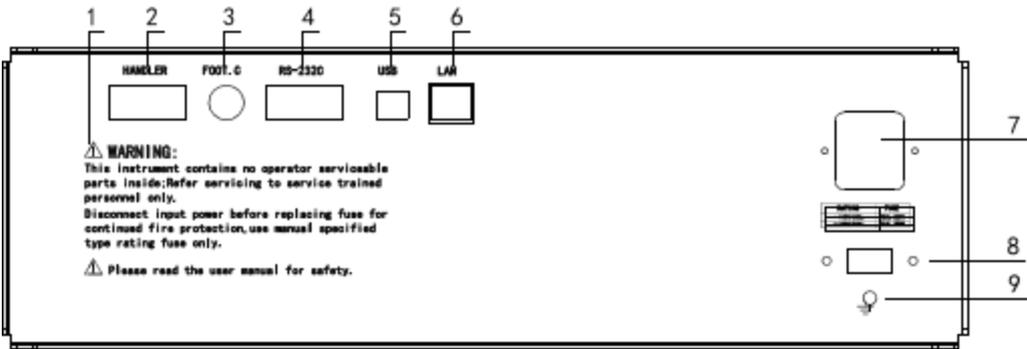

<i>Serial number</i>	<i>Name</i>	<i>Instruction</i>
1	Warning	
2	HANDLER interface	Comparison results are output via the handler interface. You can also start or stop a test through the interface.
3	FOOT CONTROL	A footswitch can be used to start a measurement instead of pressing the <b>START</b> key from the front panel.
4	RS232C serial interface	RS232C serial interface can be connected to an external device for remote control and operation
5	USB DEVICE interface	A PC can remotely control PT50xx through the USB DEVICE interface.
6	LAN interface	Be used to connect network cable.
7	3-wire power socket	Connect the power.
8	110V/220V	switch 110V/220V by changing the direction of core
9	Ground terminal	Ground the instrument shell.

Table 3-2 Rear Panel Instruction

## Introduction to display area

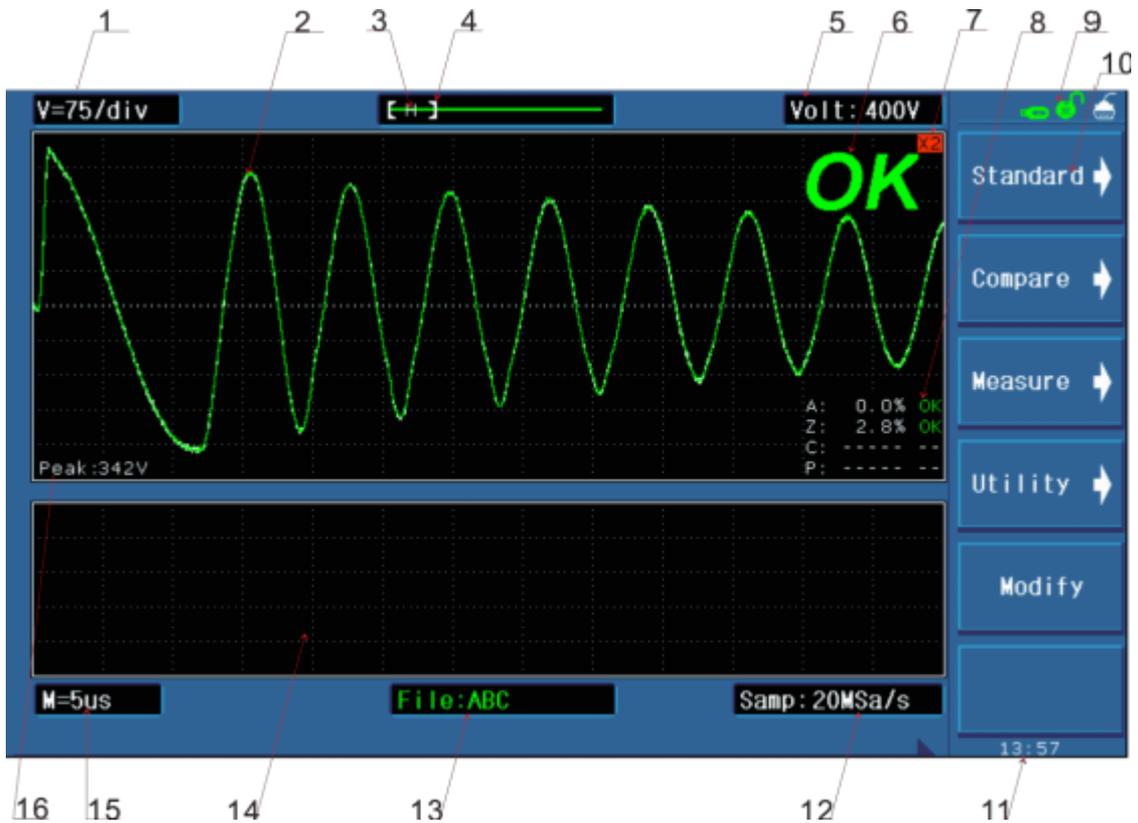

Specific definition for each area:

- 1 Voltage/div  
Show the voltage of every grid
- 2 Waveform display area  
In this area, test and standard waveforms, peaks of impulse voltage and comparison results are displayed.
- 3 Indicate whether a standard waveform exists. H means a standard waveform exists while N does not.
- 4 Indicate the waveform location in the memory.
- 5 Impulse voltage  
Show the current set impulse voltage. This voltage can be changed by the [Modify] soft key and the number key.
- 6 Measurement result  
Show the final measurement result.
- 7 Waveform  
waveform is or not zoom in
- 8 Comparison result

Four comparison results and their final display results

9 Information

Show the state of interface selecting, availability of U disk, key lock, etc.

10 Function zones of soft keys

Show the corresponding function and parameter of each soft key.

11 Time

Display the real time.

12 Time base

This area shows the time between the two dash lines of this waveform display area in X direction. The time shown in this area cannot be modified by user but varies with the sampling rate and time base zoom.

13 File name

Show the name of the current file, \*means no file.

14 Secondary display zone

Display comparison methods and their basic parameters, extraction quantity of corona

15 Sampling rate

Show the sampling rate of the current waveform, which can be altered by the [Modify] soft key.

16 Peak value

Show the peak value of the current test voltage.

# Chapter 4 Introduction to [DISP]

Press the DISP menu key to enter the < MEAS DISP> page (the default page). In this page, measurements are taken and the test waveform is displayed. Some function settings such as standard sampling (Standard), comparison setting (Compare), measurement function (Measure), auxiliary function (Utility), statistic function (Statistics), sampling rate, etc. Figure 4-1 shows the measurement display page.

## Measurement display page

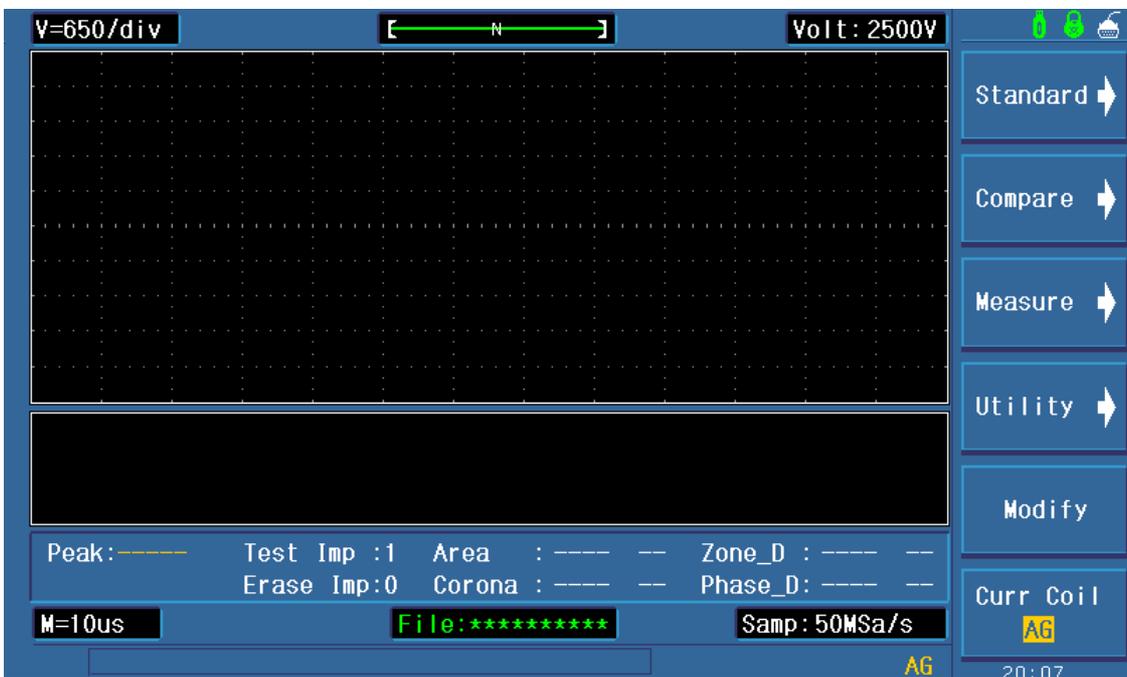


Figure 4-1 Measurement display page

## Introduction to symbols in measurement display page

▶▶ Enter the next menu.

◀▶ Return to the upper menu.

## Introduction to soft keys in measurement display page

- ✧ **Standard** Enter the **Standard sampling** sub-menu. Under this menu, standard sampling method, standard sampling, etc. can be selected.

- ✧ **Compare** Enter the **Compare setup** submenu. Under this menu, states of the four compare methods, compare parameters can be set.
- ✧ **Measure** Enter the **Compare function** submenu. Under this menu, wave voltage, wave time, wave frequency can be set.
- ✧ **Utility** Enter the **Utility function** submenu. Under this menu, wave amplitude, grid in the waveform display zone, corona display zone can be set.
- ✧ **Modify** Press the corresponding soft key and move the Cursor key to modify the impulse voltage, sampling rate.

## Standard sampling

The instrument provides three sampling modes: manual, auto and loop.

4.3.1.1 **Manual** Start to sample a standard waveform. When finished, standard waveform will be displayed in the waveform display zone.

- ✧ **Complete** Press this key to complete the acquisition of standard waveforms.
- ✧ **Average 1** Indicate the sampling times for standard waveform.
- ✧ **Undo** Cancel the current acquisition data for standard waveform. Each press of this soft key will reduce the sampling average times by 1. This key is available when **Average** is larger than 1.
- ✧ **Undo All** Cancel all acquisition data for standard waveform. This key is available when **Average** is larger than 1.
- ✧ **Start** Start to collect data for standard sample wave. Averaging can be taken after multiple sample data is collected for several times.
- ✧ **⏪** Return to previous page.

4.3.1.2 **AUTO** At each frequency, the instrument automatically samples a standard wave on the sample. Finally, a wave at an appropriate frequency will be selected.

- ✧ **⏪** Display sample waveforms at lower frequencies.
- ✧ **⏩** Display sample waveforms at higher frequencies.
- ✧ **Select** Select the sample waveform at the current frequency as the standard waveform.
- ✧ **Select & Check** Compare the sample wave with the standard wave at the current frequency, if the compare result is within the error range, choose the sample wave at the current frequency as the standard wave and return to the **main menu**; if the compare result is beyond the error range, an error information will prompt and the instrument will keep in the wait state to **Start a new sample**.
- ✧ **Start** Start automatic test.
- ✧ **⏪** Return to previous page.

- 4.3.1.3 **LOOP** The instrument starts to sample standard waveforms, change frequency, and cycle sampling.
- Select** Select the sample waveform at the current frequency as the standard waveform.
- Select & Check** Compare the sample wave with the standard wave at the current frequency, if the compare result is within the error range, choose the sample wave at the current frequency as the standard wave and return to the **main menu**; if the compare result is beyond the error range, an error information will prompt and the instrument will keep in the wait state to **Start** a new sample.
- Start** Start loop test.
- ↕** Return to previous page.
- 4.3.1.4 **◀** Return to the **main menu**.

## Compare

PT50xx series provides four kinds of compare methods as follows: Area Size Comparison, Differential Area Comparison, Corona Discharge Comparison and Phase Differential Comparison. The instrument collects the waveform data of 6500 points, thus user can select the comparison area between the start position and 6500.

Press the **Compare** soft key to enter the main menu of it. Four compare methods can be set under this menu.

**Note:** Press the **Position 0000-** soft key to enable the number . When the left/right key is revolved, two parallel yellow lines (except Differential Phase comparison) will be displayed in the waveform display zone. The full line is the selected one, while the dash line is not the selected one.

### 4.3.2.1 AREA SIZE

- ◇" **Method AREA** Select the area comparison method.
- ◇" **State**  means this method is turned on, while  means off.
- ◇" **Position 0000-6500** Lighten this icon to enable the left/right key. The start point, the end point or both the start and the end points will be selected by the press of the cursor key. Pressing cursor key will change the position of the start point, the end point or both the start and the end points by 10 points. The position ranges from 0 to 6500.

◇..  Lighten the icon to enable the cursor key and change the differential value.

◇.  Return to previous page.

#### 4.3.2.2 DIFF ZONE

Method  
DIFF ZONE

Select the differential area size comparison method. All setup operations are the same as those of AREA SIZE.

#### 4.3.2.3 CORONA

Method  
Corona

Select the corona comparison method. All setup operations are the same as those of AREA SIZE. The corona comparison value has no unit ranging from 1 to 255.

#### 4.3.2.4 PHASE DIFF

Method  
PHASE DIFF

Select the phase differential comparison method. All setup operations are the same as those of AREA SIZE. But the position parameter is different, it means to choose the zero-crossing position and the value ranges from 2 to 99.

4.3.2.5  Return to the main menu.

## Measure

Measurement function is used to measure impulse voltage, time and frequency.

**Note: When a function is selected , two lines will be displayed in the waveform display zone. The differential value of the two lines corresponds to the value showing on the second soft key.**

◇..  Use soft key to switch between the high limit, the low limit and the high and low limits. Then to change the position of the high and the low limits. The voltage differential value between the high and the low limits ( $\Delta V$ ) is as shown on the second soft key.

① **Note: The default low limit locates on the center line.**

◇..  The high limit, the low limit or the high and the low limits can be selected by soft key. Then to change the position of the high and the low limits. The differential value between the high and the low limits ( $\Delta s$ ) is as shown on the second soft key.

◇..  The high limit, the low limit or the high and the low limits can be selected by soft key. Then to change the position of the high and the low limits. The differential value between the high and the low limits ( $\Delta Hz$ ) is as shown on the second soft key.

- ✧  Return to the main menu.

## Utility

Utility function is used to set parameters displayed in the waveform display zone.

- ✧ **Scale Adj** Lighten the icon. Use the soft key to enlarge the waveform display scale ranging from 1 to 3 times. When the display scale is larger than 1 times, the ratio will be displayed in the top right corner of the waveform display zone.
- ✧ **Grid**  means the grid is turned on, while  is off.
- ✧ **2nd**  means the corona is turned on. The secondary display zone will display the quantity of the extracted corona.  
 means the corona is turned off. The secondary display zone will display basic test parameters of the standard waveform and the comparison methods.
- ✧  Return to the main menu.

## Statistics

Check, save or clear statistic results.

Press **CAL** key, the statistics page will pop up. This page shows each method's measure times, pass times and ratio of pass.

State  means this function is turned on, while  is off.

Clear Clear the current statistic results.

✧ **Save** Save the current statistic data to external U disk. The default format is csv.

**Close** Return to the main menu.

## Modify

Lighten the soft key to enable the function. Press cursor key to choose or modify voltage and sample rate.

- ✧  change the voltage by 10V. The voltage ranges from 100V to 3000V or 5000V depends on model.
- ✧  select the desired sample rate..

# Chapter 5 Introduction to [SETUP]

Press **SETUP** to enter the <Setup> page.

## Introduction to icons of soft keys

 Coarse adjustment key used to increase the selected value.

 Coarse adjustment key used to decrease the selected value.

 Fine adjustment key used to increase the selected value.

 Fine adjustment key used to decrease the selected value.

## Measurement setup page

Figure 5-1 shows the measure setup page.

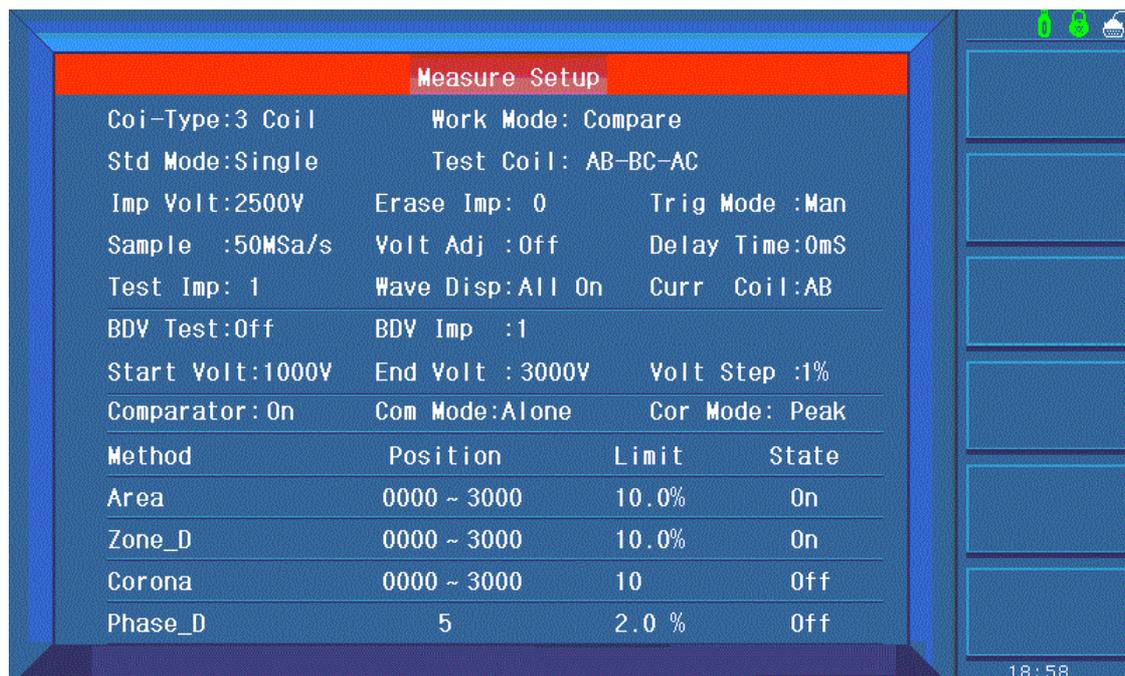


Figure 5-1 Measure setup page

Follow parameters can be set in <Setup>.

Winding type(**Imp Volt**)

Working mode(**Imp Volt**)

Std mode(**Imp Volt**)

Test winding(**Imp Volt**)

Impulse voltage ( **Imp Volt**)

Sampling rate (**Samp le**)  
 Test impulse (**Test Imp**)  
 Erase impulse (**Erase Imp**)  
 Voltage adjustment (**Volt Adj**)  
 Wave display (**Wave Disp**)  
 Trigger mode (**Trig Mode**)  
 Delay time (**Delay Time**)  
 Current winding(**Curr Wind**)  
 Breakdown voltage test (**BDV Test**)  
 Breakdown impulse(**BDV Imp**)  
 Start voltage(**Start Volt**)  
 End voltage (**End Volt**)  
 Voltage step(**Volt Step**)  
 Comparator (**Comparator**)  
 Position (**Position**)  
 Limit (**Limit**)  
 State (**State**)

## Winding Type (only for Multi-channel instrument)

The two-channel instrument can select 1 Coil or 2 Coil modes. The four-channel instrument can select 1Coil, 2 Coil, 3 Coil, 4 Coil, 3-Phase 3-Wire or 3-Phase 4-Wire mode.

1 Coil	Test single coil
2 Coil	Test two coils
3 Coil	Test three coils
4 Coil	Test four coils
3-Phase 3-Wire	Test three-phase three-wire motor
3-Phase 4-Wire	Test three-phase four-wire motor

**The three-phase three-wire and three-wire four-wire is a special three-winding test,they only use one standard waveform test.**

## Working Mode (only for Multi-channel instrument)

It is used to set the multi-channel instrument test mode: Normal test and Balance test.

- ✧ **Normal** If the instrument saved the standard waveform, the tested waveforms compared with standard waveforms. If the instrument don't save the standard waveform, only acquire and display the test waveform (the corona can be calculated).
- ✧ **Balance** Only for multi-winding coil, in this mode, the instrument check the consistency of the coils, not need to acquire the standard waveform.

## Std Mode (only for Multi-channel instrument)

For multi-channel instrument, if you select the working type as 2 coil, 3 coil or 4 coil and the working mode as Normal, the instrument can offer the independent standard waveform with different voltage and sampling rate for each winding.

- ✧ **Single Std** All of the windings use the same standard waveform.
- ✧ **Multi Std** All of the windings use the independent standard waveform with different voltage and sampling rate.

## Test Winding (only for Multi-channel instrument)

It used to set the type of the test windings.

Four-channels instrument :

Normal Working Mode :

- ✧ **1 Coil** : AG、BG、CG、DG
- ✧ **2 Coil** : AG-BG、CG-DG、AB-CD
- ✧ **3 Coil** : AG-BG-CG、AB-BC-AC
- ✧ **4 Coil** : AG-BG-CG-DG
- ✧ **3-Phase 4-Wire** : AG-BG-CG
- ✧ **3-Phase 3-Wire** : AB-BC-AC

Balance Working Mode :

- ✧ **1 Coil** : Not support
- ✧ **2 Coil** : AG-BG、CG-DG、AB-CD
- ✧ **3 Coil** : AG-BG-CG、AB-BC-AC
- ✧ **4 Coil** : AG-BG-CG-DG
- ✧ **3-Phase 4-Wire** : AG-BG-CG
- ✧ **3-Phase 3-Wire** : AB-BC-AC

TWO-channels instrument :

Normal Working Mode :

- ✧ **1 Coil** : AG、BG
- ✧ **2 Coil** : AG-BG、AG-BG-AB

Balance Working Mode :

- 1 Coil** : Not support
- 2 Coil** : AG-BG

## Curr Winding (only for Multi-channel instrument)

It used to select the current winding, then the impulse voltage and sampling rate can be set to the correspond to the winding.

## Imp Volt

The impulse voltage can be adjusted from 100V to 3000V(or 5000V) by a resolution of 10V. Move the cursor to the impulse voltage zone, following soft keys will be displayed.

 They are coarse adjustment keys used to increase and decrease the voltage by a resolution of 100V.

 They are fine adjustment keys used to increase and decrease the voltage by a resolution of 10V.

**Note: User can directly input the desired voltage by numerical keys. In the state of inputting numbers, soft keys are unavailable. When the number is input,  can be used to end inputting and the default unit is volt (V).**

## Sample

200MSa/s, 100MSa/s, 50MSa/s, 20MSa/s, 10MSa/s, 5MSa/s, 2MSa/s, 1MSa/s, 500kSa/s, 200kSa/s, 100kSa/s are optional for sample rate.

Move the cursor to the sample rate zone, following soft keys are available.

 Be used to select the desired sample rate.

## Test Imp

The number of tested impulses can be set from 1 to 32. Move the cursor to this zone, the following soft keys will be displayed.

 They are fine adjustment soft keys used to change the number of impulses by 1.

**Note: User can directly input the desired number by numerical keys. In the state of inputting numbers, soft keys are unavailable.  can be used to terminate inputting.**

## Erase Imp

The number of erase impulses can be set from 0 to 16. Move the cursor to this zone, following soft keys will be displayed.

 They are fine adjustment soft keys used to change the number of impulses by 1.

**Note: User can directly input the desired number by numerical keys. In the state of inputting numbers, soft keys are unavailable.  can be used to terminate inputting.**

## Volt ADJ

For different load on each DUT, when a given impulse voltage is applied across them, the actual

voltage applied on each DUT may also be different. User can turn on the voltage adjust function to automatically change the output voltage, thus making all voltages applied across all DUT identical.

Move the cursor to this zone, following soft keys will be available.

- ✧ **ON** Turn on the voltage adjust function.
- ✧ **OFF** Turn off the voltage adjust function.

## Wave Disp

If user only wants the comparison result, the wave display can be switched off so as to obtain a test speed much faster.

Move the cursor to this zone, following soft keys will be displayed.

- ✧ **ALL ON** Both the standard waveform and the test waveform will be displayed on the screen at the same time. For the consumption of display time, the test speed will be decreased. This display will bring convenience for user to observe waveforms.
- ✧ **STD** In the phase of measurement, only the standard waveform will be displayed on the screen, so the measurement will be taken at the fastest speed. This way is suitable for users only needing the comparison result.
- ✧ **TEST** In this mode, only the test waveform is displayed thus it will take some time to refresh the tested waveforms after each test and the test speed will be decreased.
- ✧ **ALL OFF** With the exception of comparison result, none waveforms will be displayed, therefore the test speed is the fastest in this mode.

## Trig Mode

The instrument will perform a measurement only at the receipt of a trigger signal. PT50xx provides four kinds of trigger mode: MAN (manual including foot control), EXT (external), INT (internal) and BUS. Trigger signals only in the current trigger mode can be received and will be valid only on the MEAS DISP page. Move the cursor to this zone, following soft keys will be displayed.

- ✧ **MAN** This is the default trigger mode. Pressing **START** or using the foot switch to start a measurement.
- ✧ **EXT** Via HANDLER interface, input a negative TTL pulse (more than 1μs) from external to the instrument, the rising edge of which will form a trigger impulse.
- ✧ **INT** When the trigger mode is set to this mode, PT50xx starts a measurement once **START** is pressed on the MEAS DISP page, and then the instrument will continuously repeat measurements until

**MEAS STOP** soft key is pressed.

- ◇ **BUS** TRIGGER commands are sent to PT50xx via RS232SC, USBTMC, USB CDC or LAN interface.

## Delay Time

Delay time refers to the time between the end of a measurement and the start of the next measurement. The delay function is only available when trigger mode is set to INT trigger mode. The trigger delay time can be set from 0.1s to 99s by 0.1 steps.

Move the cursor to this zone. User can input the delay time by pressing numerical keys and **ENTER** for confirmation. The input unit is s. Following soft keys can also be used to set the delay time.



They are coarse adjustment keys used to change the delay time by 1.0s.



They are fine adjustment keys used to change the delay time by 0.1s.

## BDV Test

BDV test is a test method for turn-to-turn insulation test. Starting from Start Volt and ending at End Volt by a resolution of Volt Step, the test is finally done by comparing with four comparison methods. Move the cursor to this zone, following soft keys will be displayed.

- ◇ **ON** Turn BDV test on.
- ◇ **OFF** Turn BDV test off.

## Start Volt

Start Volt ranges from 100V to 3000V(or 5000V) but cannot be larger than End Volt. Move the cursor to this zone, following soft keys will be displayed.



They are coarse adjustment keys used to change Start Volt by 100V.



They are fine adjustment keys used change Start Volt by 10V.

## End Volt

End Volt ranges from 100V to 3000V(or 5000V) but must be larger than Start Volt. Move the cursor to this zone, following soft keys will be displayed.

- ◇  They are coarse adjustment keys used to change End Volt by 100V.
- ◇  They are fine adjustment keys used change End Volt by 10V.

## Volt Step

Volt Step ranges from 1% to 50%. The step voltage is calculated as following formula:

Step volt = Start Volt \* Volt Step.

Move the cursor to this zone, following soft keys will be displayed.

- ◇  They are coarse soft keys used to change Volt Step by a resolution of 10%.
- ◇  They are fine soft keys used to change Volt Step by a resolution of 1%.

## Comparator

The comparator function allows you to set all comparators to ON or OFF. Once the comparator is turned off, the instrument cannot make any comparisons, but the test wave or the standard wave is also displayed on the measurement display page. Move the cursor to this zone, following soft keys will be displayed.

- ◇  Turn on the comparator.
- ◇  Turn off the comparator

## Position (AREA SIZE, DIFF ZONE, PHASE DIFF)

Set the comparison ranges for AREA SIZE, DIFF ZONE and CORONA that range from 0 to 6500 (the value of the end position must be larger than that of the start position.). Use numeric buttons to enter the required value and press  for confirmation. Move the cursor to this zone, following soft keys will be displayed.

- ◇  They are coarse adjustment soft keys used to change the value of position by 100.
- ◇  They are fine adjustment soft keys used to change the value of position by 10.

## Position (PHASE DIF)

Set the zero-crossing position for PHASE DIFF that is to select a zero-crossing position for the comparison of phase difference. The zero-crossing position ranges from 2 to 99. Use numeric buttons to enter the required value and press  for confirmation. Move the cursor to this zone, following soft keys will be displayed.

- ◇  They are fine adjustment soft keys used to change the zero-crossing position by 1 dot.

## DIFF (Lim) ( AREA SIZE, DIFF ZONE, PHASE DIFF)

Set the limit values for comparison methods of AREA SIZE, DIFF ZONE, PHASE DIFF which range from 0.1% to 99.9% by a resolution of 0.1%. Use numeric buttons to enter the required value and press  for confirmation. Move the cursor to this zone, following soft keys will

be displayed.

◇   They are coarse adjustment soft keys used to change the limit value by a resolution of 1.0.

◇   They are fine adjustment soft keys used to change the limit value by a resolution of 0.1.

## DIFF (Lim) ( CORONA

Set the limit values for comparison methods of CORONA which range from 0 to 256 by a resolution of 1 dot. Use numeric buttons to enter the required value and press **ENTER** for confirmation. Move the cursor to this zone, following soft keys will be displayed.

◇   They are coarse adjustment soft keys used to change the limit value by a resolution of 10 dots.

◇   They are fine adjustment soft keys used to change the limit value by a resolution of 1 dot.

## Int. File

PT50xx series can save parameters that are set by user to the internal non-volatile memory in file format. User can load the file to use these parameters instead of resetting. The internal memory can store 100 groups of files including files of measure parameters, compare parameters, etc. Figure 5-2 shows the page of internal file.

 


Figure 5-2 Internal File

Int. File consists of file number (NO), file name (File), Date/ Time, Load. Following soft keys can be used in this page.

- ✧ **Load** Press this key to load a file stored in the internal non-volatile memory. As figure 5-2 indicates, using the arrow key select the needed file. Press **LOAD** to load the file. If the selected file is needed to load, press **YES**; otherwise, press **NO**.
- ✧ **UnLoad** UnLoad the loaded file. Using the arrow key select the needed file. If the selected file has been loaded, press **UnLoad**. If the selected file is needed to unLoad, press **YES**; otherwise **NO**.
- ✧ **Copy to E:** Copy internal files to external files (in U disk). Using the arrow key select the desired file. If the selected file is needed to copy to an external U disk, press **Copy to E:** and then choose **YES**, otherwise choosing **NO** to give up this operation.
- ✧ **Delete** Delete stored files. Press the **Delete** soft key and then choose **YES** to confirm this operation or **NO** to give up.

**Note: If the selected file has been loaded, the starting-up load function will be invalid.**

- ✧ **Save** Press this key to save a file. Move the arrow key to choose the catalog to store the file. Press the **SAVE** soft key to store the file and then **YES** for confirmation (Choose **NO** to give up the save operation.) The file can be save after entering a file name and pressing the **ENTER** button. If user press the **ENTER** button without entering the file name, the file will be saved as

the default name-<Unnamed>. Pressing ESC can exit the operation of saving file. Letters from A to Z, numbers from 0 to 9, and underline, etc. can be used for a file name.

**Enter rules:** Pressing a numeric key, the corresponding letters or characters will be displayed on the screen. If user wants to input a number, the numeric key should be pressed again. While a letter or character is needed, then the soft key corresponding to the letter or the character should be pressed.

## Ext. File

Figure 5-3 shows the page of external file.

 


Figure 5-3 External file

The set parameters can be saved to a U disk (external file) in file format. External file storage supports three extension names: .STA, .TXT, .CSV. Only .STA file has file load function. Soft keys in the external file page are as follows:

**Sub Dir** Enter the sub-directory. Using the arrow key to choose a file, press **Sub Dir** to enter the sub-directory.

**Parent Dir** Return to the parent directory.

**Create** Create a new folder. Press **Create** and then input the name of the file folder. End the creation of new folder by press **ENTER**. If user presses **ENTER** without inputting the folder name, the folder will be named as the default name-<FOLDERxx> (xx is a number ranging from 01 to 99.). Pressing **ESC**

can exit the operation of creating. Letters from A to Z, numbers from 0 to 9, and underline, etc. can be used for a file name.

① **Note: Users are recommended to use self-defined folder name. The default name ranges from FOLDER01 to FOLDER 99.**

#### Save

Press this key to save a file. Move the arrow key to choose the catalog storing the file. Press the Save soft key and then enter the file name.

- Press  to end this operation. If the  button is pressed without inputting the file name, the default name is FILExxx.STA (xxx ranges from 001 to 999.).
- Press , soft keys ,  and  will be displayed in the soft key zone.
  - ◆ Press , the file will be save as  file. If the file name is not input, the file will be named as the default name FILExxx. STA (xxx ranges from 001 to 999.).
  - ◆ Press , the file will be save as  file. If the file name is not input, the file will be named as the default name FILExxx. TXT (xxx ranges from 001 to 999.).
  - ◆ Press , the file will be save as  file. If the file name is not input, the file will be named as the default name FILExxx. CSV (xxx ranges from 001 to 999.).

① **Note: Users are recommended to use self-defined folder name. The default name ranges from FOLDER001 to FOLDER 099.**

#### Load

Load a file saved in an external U disk. Using the arrow key can choose the desired file. Press Load. If the selected external file is needed to load to the internal RAM, press , otherwise .

①**Note: Although the instrument supports three file formats, ,  and , only  file can be loaded to internal RAM.**

#### Delete

Delete saved files. Press . Then choose  to delete the file, otherwise  to cancel the delete operation.

#### Copy to I:

Copy external files (in U disk) to internal file list. Using the arrow key can select the desired file. If the selected file is needed to copy to the internal file list, press  and then choose , otherwise choosing  to give up this operation. Press  to end coping. In numeric input state, press  to exit from this page.

# Chapter 6 Introduction to [SYSTEM]

Press  to enter System.

## System

Figure 6-1 shows the System page.

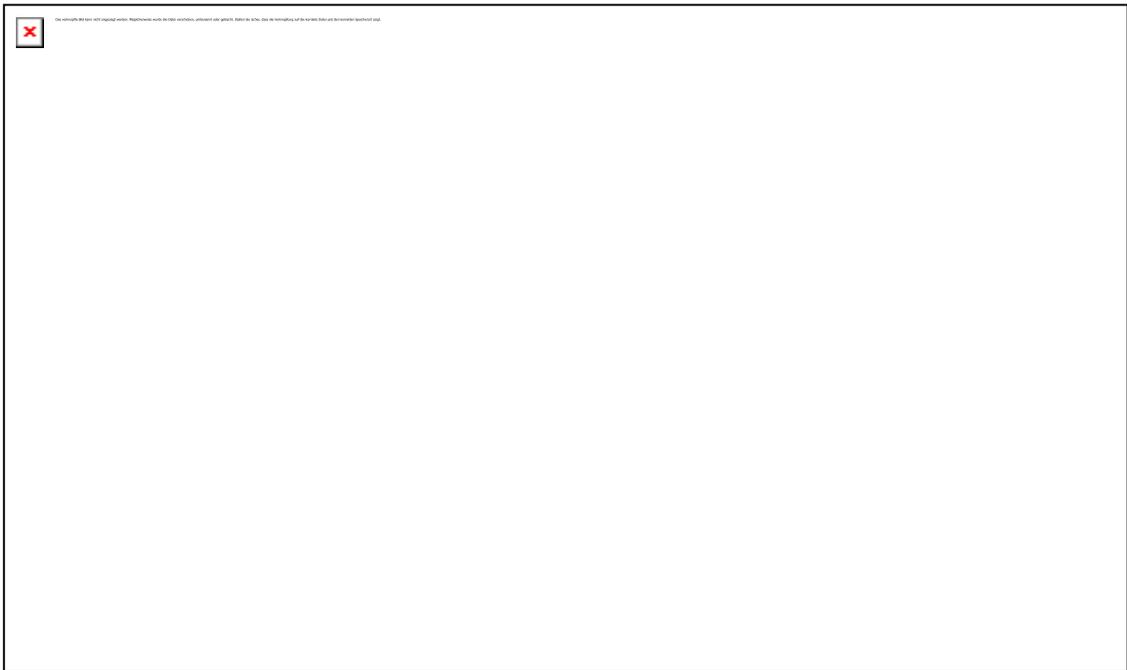


Figure 6-1 System

Parameters irrelevant to test performance can be set in this page.

- ◆ **Brightness**
- ◆ **Pass/Fail**
- ◆ **Pass Alarm**
- ◆ **Fail Alarm**
- ◆ **Key Sound**
- ◆ **Hard Copy**
- ◆ **Password**
- ◆ **Language**
- ◆ **Theme**
- ◆ **Date**
- ◆ **Time**

## Brightness

Move the cursor to this zone, following soft keys will be displayed.

   They are soft keys used to increase and decrease the LCD display.

## Pass/Fail

Move the cursor to this zone, following soft keys will be displayed.

- ◇  Turn on Pass/Fail display function.
- ◇  Turn off Pass/Fail display function.

## Pass Alarm

Move the cursor to this zone, following soft keys will be displayed.

   They are soft keys used to adjust the volume of the pass alarm. The lowest volume is mute.

## Fail Alarm

Move the cursor to this zone, following soft keys will be displayed.

◇    They are soft keys used to adjust the volume of the fail alarm. The lowest volume is mute.

## Key Sound

Move the cursor to this zone, following soft keys will be displayed.

-  Turn on the key sound.
-  Turn off the key sound.

## Hard Copy

Move the cursor to this zone, following soft keys will be displayed.

-  Full screen will be copied.
-  Only wave zone will be copied.

① **Note:**  is valid only in the measurement display page. In the other pages, the default copy zone is .

## Password

Move the cursor to this zone, following soft keys will be displayed.

- ◇  Turn on the password function. When user turns on or unlocks the instrument, it is required to input password.

- ✧ **Off** Turn off the password function. When user turns on or unlocks the instrument, it is not required to input password.

**Note: When turning off the password function, it is required to input the password.**

- ✧ **Modify** This key is used to modify the password. The instrument will prompt user to input old password, new password and new password again in turn. (Press **ESC** to exit from modifying password.)

**Note: Only numbers can be used as password.**

## Language

Move the cursor to this zone, following soft keys will be displayed.

**中文** Choose Chinese as the display and operation language.

**English** Choose English as the display and operation language.

## Theme

- ✧ RoyalBlue
- ✧ Seagreen
- ✧ Steelblue
- ✧ Indianred

## Date

Date can be set in this zone. The display format is like 2012/06/06. Move the cursor to this zone, following soft keys can be used.

**▲▼↓** They are soft keys used to adjust date by 1 day.

☞ **Note: The date can be directly input by numeric keys. In the process of inputting numbers, soft keys are not available. User can press **ENTER** to terminate inputting (In the state of inputting, if it is required to exit from modifying, press **ESC**).**

## Time

Time can be set in this zone. The display format is like 06:08:28. Move the cursor to this zone, following soft keys can be used.

✧**▲▼↓▼↓** They are soft keys used to adjust time by 1.

☞ **Note: The time can be directly input by numeric keys. In the process of inputting numbers, soft keys are not available. User can press **ENTER** to terminate inputting (In the state of inputting, if it is required to exit from modifying, press **ESC**).**

## I/O Interface

In this page, information about **RS232** interface, **USB** interface (USBTMC or USB CDC),

LAN interface and interface setups can be set, as shown in figure 6-2.



Figure 6-2 Interface

## I/O

Move the cursor to the **I/O** zone, following soft keys will be displayed.

- ✧ **RS232C** Set RS232 interface as the I/O interface.
- ✧ **USB** Set USB interface as the I/O interface.
- ✧ **LAN** Set LAN interface as the I/O interface.

① **Note:** Once an interface is selected, the cursor can only move in the corresponding zone. For example, when RS232C interface is selected, the cursor can move only in the RS232C setup zone.

## PT50xx RS232C interface

RS-232 standard, also called as asynchronous serial communication standard, has already been widely used for data communication between computers, computer and external equipment. RS is the English abbreviation of Recommended Standard; 232, the standard number. This standard is issued by IEA in 1969, which rules to send one bit in a data line every time.


As most serial interfaces, the serial interface of PT50xx is also not strictly based on RS-232 standard but only uses the smallest subset of this standard. The signals are listed in the following

table.

Signal	Code	Connector pin number
Transmitted data	TXD	2
Received data	RXD	3
Signal ground common	GND	5

**Table 6-1 RS-232 signal and pin number**

The reason is that the use of three lines is much more inexpensive and much simpler than that of five lines or six lines, which is the biggest advantage of using serial interface for communication. The connection of the instrument with PC is shown in figure 6-3:

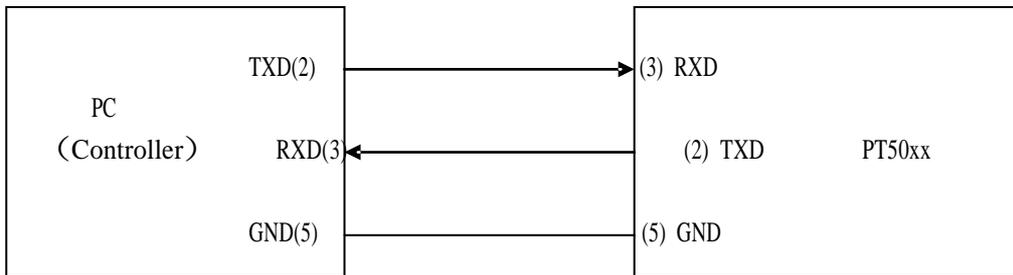

**Figure 6-3 Connection of the instrument with PC**

Figure 6-3 shows that the serial interface pin definition of this instrument is different from that of 9 pin connector used in IMB AT compatible computer. User can purchase the serial interface cable from our company.

PT50xx's baud rate, data bit, stop bit, parity bit and Tx term can be set. See the following 5 sections for details.

Commands of PT50xx comply with SCPI standard. When a command string is sent to the instrument, Tx term must be attached to the end of the string. The length of a SCPI command string that PT50xx can receive every time is up to 2k Byte.

See command reference for data format that the instrument sends to PC.

### Baud Rate

PT50xx provides five baud rates: 4800bit、9600bit、19200bit、38400bit、115200bit. Move the cursor to this zone, following soft keys can be used.

↔↔▲↓↓↓▼↓ They are soft keys used to choose the required baud rate.

### Data Bit

Move the cursor to this zone, following soft keys can be used.

- 6 Set the data bit to 6 Bit.
- 7 Set the data bit to 7 Bit.
- 8 Set the data bit to 8 Bit.

### Stop Bit

Move the cursor to this zone, following soft keys can be used.

- ◇ **1 Bit** Set the stop bit to 1 bit.
- ◇ **1.5 Bit** Set the stop bit to 1.5 bit.
- ◇ **2 Bit** Set the stop bit to 2 bit.

### Parity

Move the cursor to this zone, following soft keys can be used.

- None** Set the parity as None.
- Odd** Set the parity as Odd.
- Even** Set the parity as Even.

### Tx Term

Move the cursor to this zone, following soft keys can be used.

- ◇ **LF** Set the Tx term as **\n** (ASCII is 0x0A).
- ◇ **CR** Set the Tx term as **\r** (ASCII is 0x0D).
- ◇ **LFCR** Set the Tx term as **\r\n** (ASCII is 0x0D and 0x0A).

## USB interface

Move the cursor to this zone, following soft keys can be used.

- ◇ **USBCDC** Set USBCDC interface as the USB interface.
- ◇ **USBTMC** Set USBTMC interface as the USB interface.

### USBCDC interface

Choosing USBCDC, user can configure the USB interface as a virtual serial port.

Connect USB interfaces of PT50xx and a PC through a USB cable.

**Install drive:** Select the path of the drive file-PT50xx-vcom.inf.

After the drive is installed, user can see “PT50xx USB Vcom Port (COM3)” in the device manager, as shown in figure 6-5

 


Figure 6-5 USB CDC has been installed

Now, usb VCom port acts as a serial port. When PC has no serial port, the communication software based on this serial port can be used as USB virtual serial port.

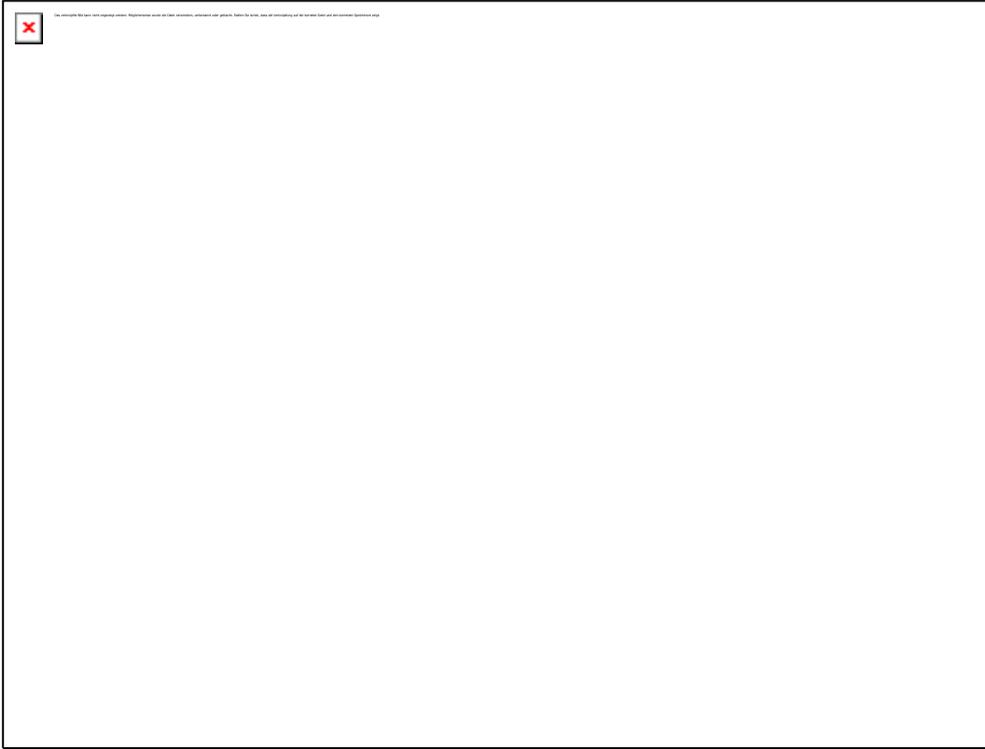


Figure 6-6 USBCDC has not been installed.

### USBTMC interface

USB (Universal Serial Bus) remote control system controls the instrument through the USB interface. This connection conforms to USBTMC-USB488 and USB2.0 protocols.

Connect USB interfaces on PC and PT50xx through a USB cable.

**Install drive:** The installing steps of USBTMC are the same as that of USBCDC, see 6.2.3.1 for reference. When the installation of drive is finished, user can see “USB Test and Measurement Devices” in the device manager of PC, as shown in figure 6-7.

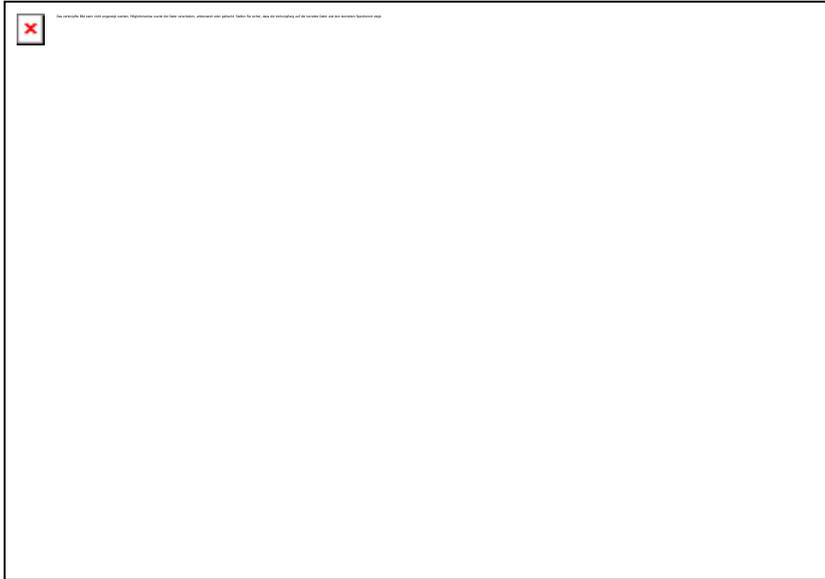


Figure 6-7 PC has installed USBTMC drive

When user is using USBTMC interface, labview software can be used to access the instrument.

## LAN interface

LAN (Local Area Network) can access PT50xx by two ways.

- (1) Access PT50xx by a browser.
- (2) Access PT50xx by Labview software.

## System configuration

PT50xx is connected to a PC by a crossover network cable. If PT50xx is connected to a router, peer to peer network cable should be used.

## Parameter settings

Select LAN interface in the interface page to enter the LAN setup page. Now you can set the following parameters: IP address, SUB MASK, gateway and DNS. Refer to the PC (connecting with PT50xx) network parameter setups for PT50xx LAN parameter setups. For example: PC network parameter setups are shown in figure 6-8, PT50xx network parameter setups are shown in figure 6-9.

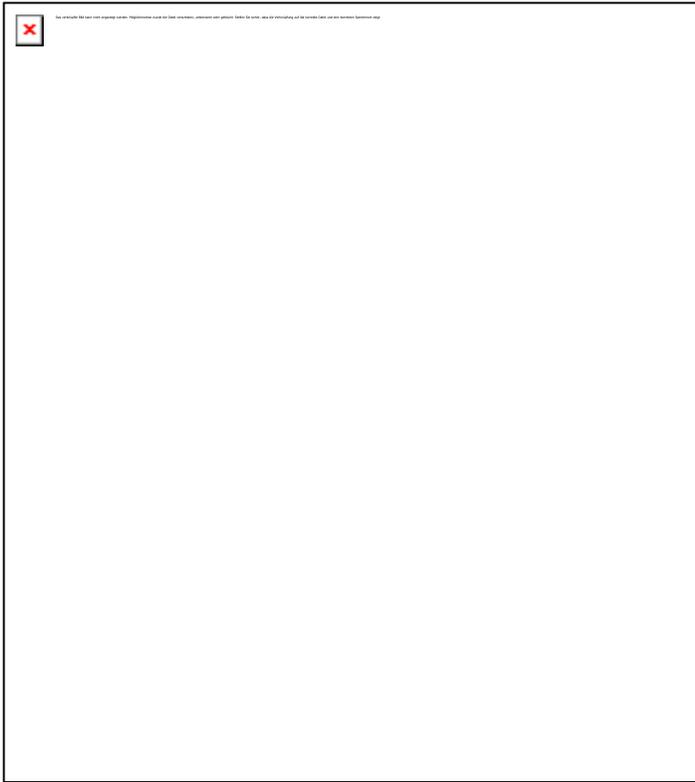


Figure 6-8 Network parameters of Host computer

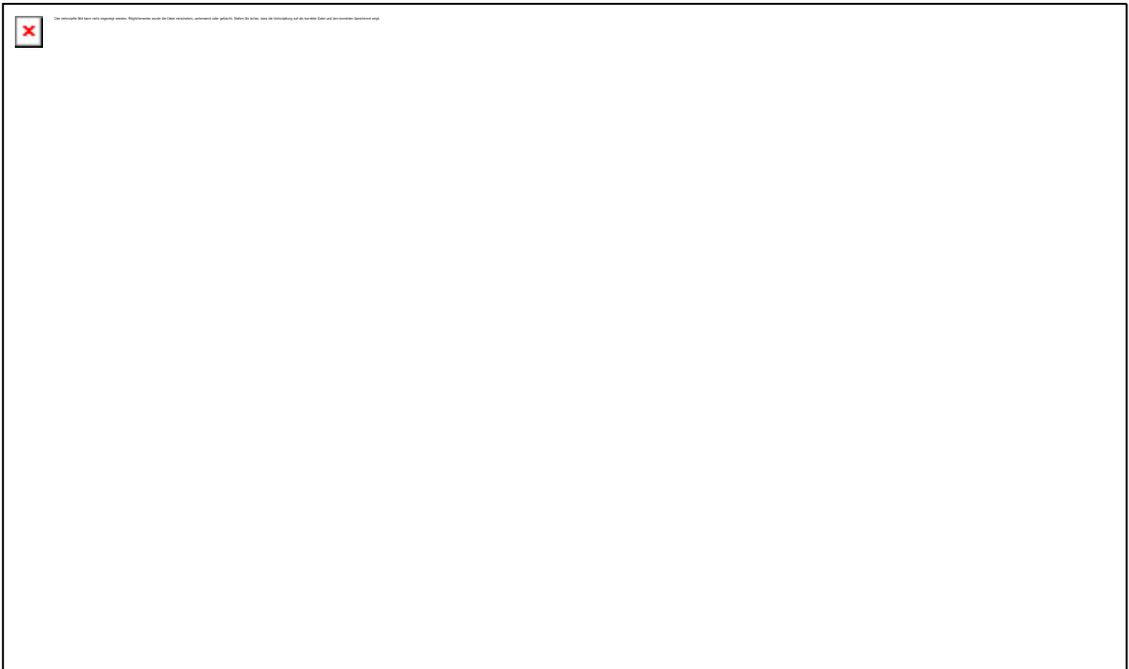


Figure 6-9 Network parameters of PT50xx

#### 6.2.4.1 Access PT50xx through a browser

When PT50xx is accessed through a browser, it acts as a WEB server. User can access PT50xx

by Internet Explorer (IE6.0 or upgraded version).

Steps of the access to PT50xx through a browser (assume that the instrument IP is 192.168.1.140)

- (1) Start up Internet Explorer.
- (2) Input <http://192.168.1.140/> in the address zone and then press ENTER to finish inputting.
- (3) The startup screen of Web server is shown as figure 6-10.

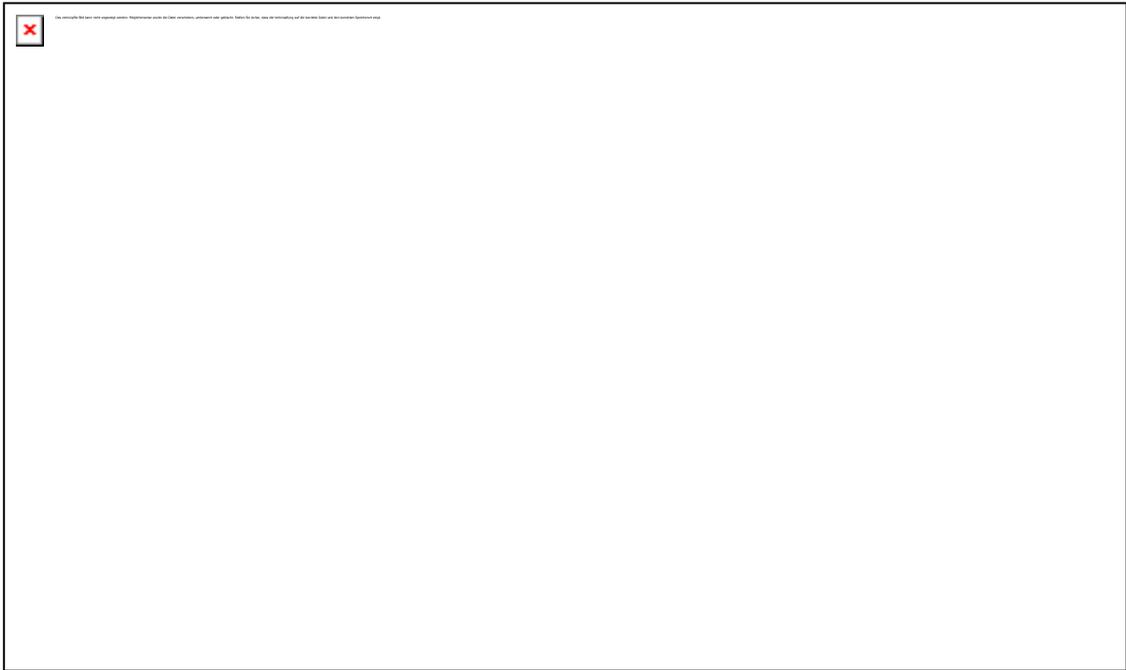


Figure 6-10 Access to PT50xx through a browser

- (4) Click the item link (as circled by the red line in above figure) on the left side of the web page to enter the corresponding web page.

#### **6.2.4.2 Access PT50xx through the Labview software**

User can control PT50xx through Labview software. See Labview instruction manual for more details.

### **About**

The About page shows some relevant information of the instrument, such as Model Number, Firmware Version, System Version. There are three soft keys available: Reset, Factory, Firmware update. Figure 6-11 shows the About page.



Figure 6-11 About

Following soft keys can be used in the About page.

- ✧ **Reset** Press this key to reset the instrument.
- ✧ **Factory** Press this key to reset the instrument to factory settings.
- ✧ **Firmware Update** Auto Update Meter Firmware.

# Chapter 7 User guide

## Use of keys

### Switch the display page

There are three function pages displayed on the instrument: DISP, STEUP and SYSTEM.

1. **DISP** Press this key to enter the measurement display page.
2. **SETUP** Press this key to enter the parameter setup page.
3. **SYSTEM** Press this key to enter the system setup page.

### Basic measurement

Start up the instrument to enter the default measurement display page. The primary display zone shows the tested waveform while the secondary one shows parameters of corona or test.

### Non-standard test

This test is applicable to trial sample test.

Switch on the instrument at the test impulse voltage of 1000V and the sample rate of 50MSa/s. Connect the test cable to DUT and press **START**, thus a test for DUT is done. Waveforms of the damping oscillation will be displayed in the primary display zone, observe the density of the waveforms and then modify the sample rate and repeat above processes. The secondary display zone shows the corona value, which is tested at high voltage test impulse and directly representing the insulation performance of DUT.

### Sample test for standard wave

This test is applicable to batch test.

Modify the test voltage. Press the **Standard** soft key under the main menu. Choose **Auto** to enter the page of auto sample function. Press the **Start** soft key to automatically change the test frequencies. After a loop test for DUT is done, a waveform, most suitable for observing test, will be selected. Press **Select** to finish the acquisition of standard waveform. Replace a DUT and then press the **START** button to start the test. Set some criteria to judge the DUT to be good or bad.



## BDV test

Determine an impulse voltage appropriate to test.

The applied voltage has little effect on the turn-to-turn short test and the layer-to-layer short test of coil, but the amplitude of the applied impulse voltage has a great impact on the insulation test of coil. PT50xx solves the problem of how to set an appropriate voltage. When it is required to determine an appropriate voltage for a kind of new product or for trial test, except the industrial specified voltage, PT50xx can find out the appropriate test voltage by switching on the BDV test function.

Enter the setup page and turn on BDV test. After setting start voltage, end voltage and step voltage, turn on the corona comparison and return to the measurement display page. Press  to start the test on DUT from the start voltage and then raise the voltage by step voltage. By observing the corona discharge (corona transition value), the voltage can be determined. 70~80% of the voltage is appropriate for test voltage.

## Technology application

### Test objects

#### 1. Turn-to-turn and layer-to-layer short

Turn-to-turn short refers to the short caused by the insulation damage between turns. Layer-to-layer short occurs in the coil consisting of multiple layers. There are two kinds of short: direct short and pull arc short, both of which are shown as more dissipation.

#### 2. Bad coil

The different number of coils will cause the variation of inductance, which is reflected as the change of oscillation period.

#### 3. Corona discharge

Due to the use of impulse high voltage, if the insulations between the coil and layer and terminal are not strong enough, operator can observe the discharge and the corona discharge phenomenons. The corona discharge that can be captured by the impulse winding tester has weak energy. Instead of influencing the attenuation oscillation wave, it is only displayed as discrete jumping points around the waveform of high potential.

#### 4. Material of magnetic core

Whether a magnet is used in the coil as the magnetic core or the magnet is poor, above conditions of the magnet will influence the inductance and the dissipation. Likewise, if air gas is designed in the magnetic core, the size of which will also have an impact on the inductance and the dissipation. Effects mentioned above will show as changes of the attenuating vibration period and the attenuation degree.

## Select comparison method

Area size comparison is mainly used to compare the energy consumption.

Differential area comparison is sensitive to energy consumption and inductance change.

Corona comparison method is the best one for testing internal insulation of the coil.

Differential phase comparison is the most suitable one to show the inductance difference.

To test turn-to-turn short or layer-to-layer short, it is recommended to use Area Size comparison.

Poor coil can be recognized by Differential Phase comparison.

The insulation performance has some impacts on the life span of the coil products. For this reason, when the test occasion requires high standard of insulation performance, corona comparison must be switched on.

The material difference of magnetic core can be tested by Area Size comparison, Differential Area comparison or Corona comparison.

Both Area size comparison and corona comparison can be used to test coils of motor, solenoid and relay. Area size comparison, according to energy dissipation, can effectively detect layer-to-layer short and circle-to-circle short, while corona comparison is mainly applied to detect coil's internal insulation failure. If it is required to test inductance, differential area comparison should be selected.

## Settings of comparison method

Sample the standard wave by ways mentioned in 7.2.2 and turn on the required comparisons dealt with in 7.4.2. For area size comparison and corona comparison, the setting values are determined by the two methods discussed below:

- A. ① If the condition is permitted, test 10 to 20 samples.
- ② Find out the entity that has the largest deviation value and then use it to make electrical test. If this one is good, enlarge the value by 20% and take it as the criteria (except corona).
- ③ When testing a product, if a boundary value is detected, repeat step ②.
- ④ The corona value is the transition one. The default value is 10.
- B. ① It is the same as A①.
- ② Take a coil to make failure test. Short two adjacent turns of coil and then make another test.
- ③ Take the differential area size of the sample as the high limit, the maximum unit differential area size of the sample as the low limit. Select an appropriate value as the criteria.
- ④ If the low limit is larger than the high limit, take the product that has the largest unit difference to make electrical test thus judging whether it is a poor product. Another way is to average samples (see 7.4.4) to take their differential area size or

switch off the test method and directly take the corona comparison method.

⑤ It is the same as A④.

## Select standards

1. Set test voltage. Then observe the corona value under non-standard test mode (7.2.1).
2. Sample the standard wave by methods mentioned in 7.2.2. Test 10 to 20 samples and select products that have the most similar differences.
3. Take the selected products to make sample average (4.3.1.1 Manual) and choose the final result as the standard wave.
4. Results obtaining after procedures 1-3 can be taken as the standards.

## Chart for differential area

In the process of BDV test, the secondary display zone displays not only the extraction value of the corona but also the chart record of differential area after each test. The chart can help user observe the changing regularity of the area differences during the test from the start voltage to the end voltage.

# Chapter 8 Command reference

## Command structure

PT50xx series has two types of commands: GPIB common commands and SCPI commands. The GPIB common commands are defined in IEEE std.488.2-1987, and these commands are common for all devices. Not all GPIB commands are supported by the PT50xx series. The SCPI commands are used to control all of the PT50xx's functions. The SCPI commands are tree-structured and three-level deep. (The highest level commands are called the subsystem commands in this manual.) So the lower level commands are legal only when the subsystem commands have been selected. A colon (:) is used to separate the higher level commands and the lower level commands. See Figure 8-1 for a sample.

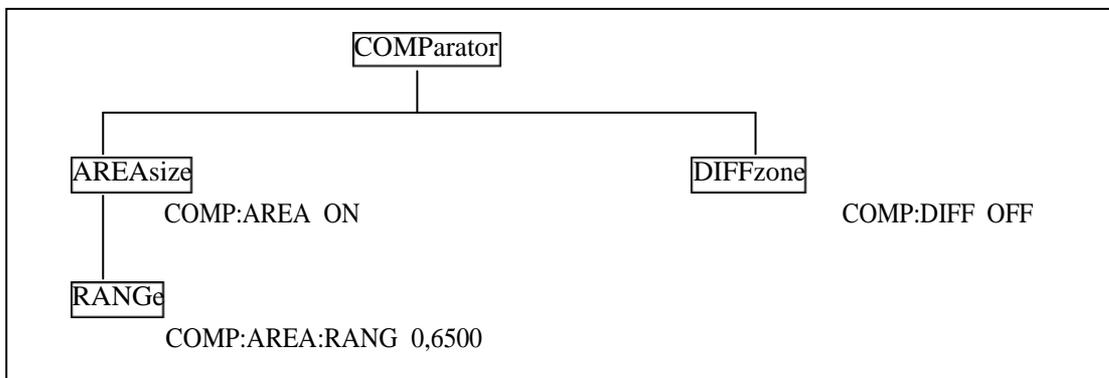


Figure 8-1 Command Tree

Basic rules of commands structure:

- Letter case (upper and lower) is ignored.  
For example: COMP:AREA ON = comp:area on = Comp:aRea On
- Space ( \_ indicates a space) must not be placed before and/ or after a colon (:).  
For example:  COMP \_:\_ AREA ON →  COMP:AREA ON
- Space is used to partition off command and parameter. Commands locate before space and their corresponding parameters put after space.  
For example: COMP:AREA ON, AREA is command, ON is parameter.
- Some command has no parameter.  
For example: Trigger command-TRIG, Standard waveform choosing command: SWAVE:CHOOSE
- The command can be completely spelled out or in abbreviated type. (The rules of command abbreviation are described later in this section, and abbreviation is spelling out in upper letter

case.)

For example: `COMPARATOR:AREASIZE ON = COMP:AREA ON`

- The command header should be followed by a question mark (?) to generate a query for that command.

For example: `COMP:AREA?`

#### Multiple command rules:

The semicolon (;) can be used as a separator to execute multiple commands on a single line. The multiple command rules are as follows.

- Commands at the same level and in the same subsystem command group can be separated by a semicolon (;) on a multiple command line.

For example: `COMP:AREA:STAT ON;RANG 0,6500`

`STA ON` and `RANG 0,6500` are commands in the same level and subcommands under `AREA`.

- To restart commands from the highest level, a semicolon (;) must be used as the separator, and then a colon (:), which shows that the restarted command is a command at the top of the command tree, must follow.

For example: `COMP:AREA:STAT ON;:COMP:AREA:RANG 0,6500`

- The GPIB common commands can be placed in previous, middle or last on a multiple command line, partitioned off with semicolons.

For example: `COMP:AREA ON;*trg;DIFF ON`

#### Short-form rules:

- If complete commands and parameters (called long form afterwards) have four characters or less, the long form and short form are the same.
- When the long form has more than 4 characters:
  1. And if the 4th character is a vowel, the short form is the first 3 characters of the long form.
  2. If the 4th character is not a vowel, the short form is the first 4 characters.

For example:

`TIME` abbreviates to `TIME`.

`TRIGger` abbreviates to `TRIG`.

`DELeTe` abbreviates to `DEL`.

`FREQuency` abbreviates to `FREQ`.

- If the long form mnemonic is defined as a phrase rather than a single word, then the long form mnemonic is the first character of the first word(s) followed by the entire last word. The above rules, when the long form mnemonic is a single word, are then applied to the resulting long form mnemonic to obtain the short form.

For example: Mass `MEMory` abbreviates to `MMEM` (long form is `MMEMory`)

Impulse `VOLTage` abbreviates to `IVOLT`(long form is `IVOLTage`)

☞ **NOTE: At the process of commands, the instrument does not distinguish letter case**

**including units.**

For example: disp:page meas = DISP:PAGE MEAS = DiSp:PAGE MEas

**Data format**

PT50xx outputs the waveform data using the ASCII via the GPIB bus. The format is described as follows.

Waveform Data Trans-format:

```
<DATA[1][0]><DATA[1][1]><DATA[2][0]><DATA[2][1]><DATA[3][0]><DATA[3][1] .....
<DATA[960][0]> <DATA[960][1]>  →<NL^END>
```

Figure 8-2 Data format

In Figure 8-2, <NL> is New Line character (decimal 10), ^END is EOI terminator signal. If waveform data is ready, PT50xx sends out waveform data in ASCII string with <NL ^END> as the terminal character, otherwise PT50xx returns <NL ^END> directly.

As shown in figure 8-2, each point data of a waveform is returned as two ASCII codes. PT50xx sends the two ASCII codes, the first output ASCII code is the 4 high bits and the second output ASCII code is the 4 low bits. Controller should compose the two ASCII codes as one HEX data for displaying and calculating.

**① NOTE: As soon as the query command is sent PC should be in receiving status so as to avoid data lose.**

**Notation conventions and definitions**

1. The following characters are used in the command syntax.
  - : A colon is used to separate the higher level commands and the lower level commands.
  - ; The semicolon can be used as a separator to execute multiple commands on a single line.
  - \* Asterisk is used to indicate that the command followed is a common command.
  - ? A question mark is used to generate a query for the command in front of it.
  - , Comma is used to separate the multi-parameters in the command.
  - \_ White space is used to separate the command and the parameters.
  - "" Double quotation marks indicate that the enclosed text is string data.
2. The following characters will be used in this chapter to describe GPIB commands.
 

NR1	Integer numeric data	For example: 123
NR2	Fixed point numeric data	For example: 12.3
NR3	Floating point numeric data	For example: 12.3E+5
NL	New Line character (decimal 10) is the end of the input/output string.	
^END:	EOI terminator signal of IEEE-488 bus.	
< >	Angular brackets enclose words or characters that are used to symbolize a program code parameter or a GPIB command.	

- [ ] Square brackets indicate that the enclosed items are optional.
- { } When several items are enclosed by braces, one and only one of these elements may be selected.

## Command reference

PT50xx subsystem commands:

- DISPLAY
- Impulse VOLTage
- Sample RATE
- FETCh ?
- Mass MEMory
- Measure Function
- Standard WAVE
- MEASure
- Local Control
- COMParator
- MWINDing
- ABORt
- TRIGger

GPIO common commands:

- \*RST
- \*TRG
- \*IDN

## DISPlay subsystem commands

The DISPlay subsystem commands set the display page. Figure 8-3 shows the command tree of the DISPlay subsystem commands.

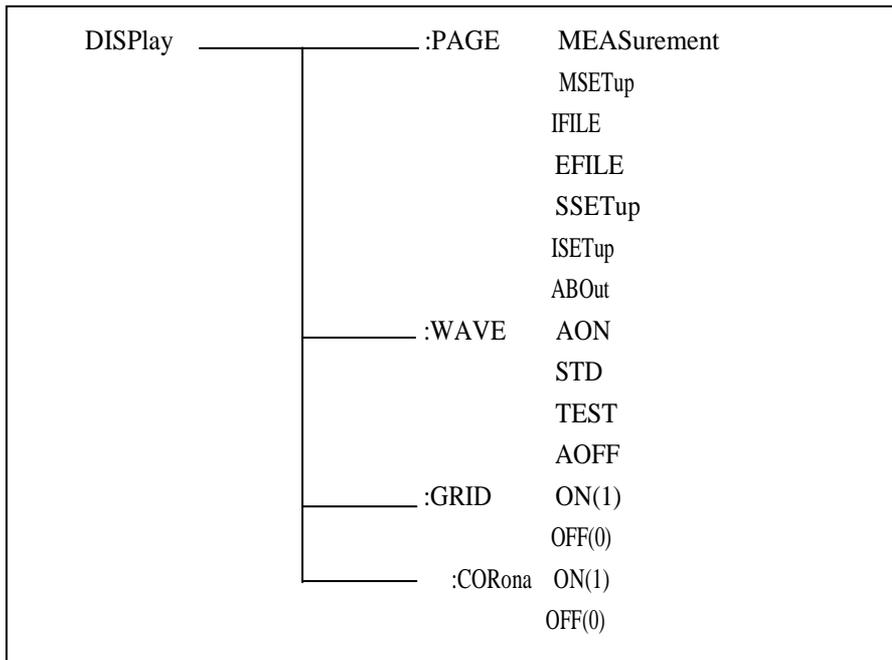


Figure 8-3 DISPlay subsystem command tree

The :PAGE command sets the display page. The :PAGE? query returns the abbreviated page name displayed on the LCD screen.

Command syntax: `DISPlay:PAGE <page name>`

<page name> are as follows:

MEASurement sets the display page to the measurement display page (MEASurement).

MSETup sets the display page to the measurement setup page (Meas SETUP).

SSETup sets the display page to the system setup page (System SETUP).

IFILE sets the display page to the internal file setup page (Int FILE).

EFILE sets the display page to the external file setup page (Ext FILE).

IOSETup sets the display page to the IO setup page (IO SETUP).

ABOut sets the display page to the About page (ABOut).

For example: `WrtCmd( "DISP:PAGE MEAS" );` set the display page to the measurement display page.

**① NOTE: This command will be ignored in the phase of measurement.**

Query syntax: `DISPlay:PAGE?`

Return format: `<page name><NL^END>`

<page name> are as follows:

< MEAS DISP > indicates that the current displayed page is the measurement display page.

< MEAS SETUP > indicates that the current displayed page is the measurement setup page.

< INT FILE > indicates that the current displayed page is the internal file page.

< EXT FILE > indicates the current displayed page is the external file page.

<SYSTEM SETUP> indicates that the current displayed page is the system setup page.

< IO SETUP > indicates that the current displayed page is the IO setup page.

< ABOUT> indicates that the current displayed page is the About display page.

The `:WAVE` command sets the waveform display mode. The `:WAVE?` query returns the current waveform display mode.

Command syntax:

$$\text{DISPlay:WAVE} \left\{ \begin{array}{l} \text{AON} \\ \text{STD} \\ \text{TEST} \\ \text{AOFF} \end{array} \right\}$$

Where,

AON Both the standard waveform and the tested waveform are displayed on the screen.

STD Only the standard waveform is displayed on the screen.

TEST Only the tested waveform is displayed on the screen.

AOFF No waveform is displayed.

For example: `WrtCmd( "DISP:WAVE STD" );` set to display the standard waveform only.

Query syntax: `DISPlay:WAVE?`

Return format:

$$\left. \begin{array}{l} \text{ALL ON} \\ \text{ONLY STDWAVE} \\ \text{ONLY TESTWAVE} \\ \text{ALL OFF} \end{array} \right\} \langle \text{NL}^{\wedge} \text{END} \rangle$$

Where,

ALL ON Both the standard waveform and the tested waveform are currently displayed on the screen.

ONLY STDWAVE Only the standard waveform is currently displayed on the screen.

ONLY TESTWAVE Only the tested waveform is currently displayed on the screen.

ALL OFF No waveform is displayed on the screen.

The :GRID command sets the grid display mode. The :GRID? query returns the current grid display mode.

Command syntax:

$$\text{DISPlay:GRID} \left\{ \begin{array}{l} \text{ON} \\ \text{OFF} \\ 1 \\ 0 \end{array} \right\}$$

Where,

1 (decimal49) is equal to ON; the grid display mode is ON.

0 (decimal48) is equal to OFF; the grid display mode is OFF.

For example: WrtCmd( "DISP:GRID ON" ); the grid display mode is ON.

Query syntax: DISPlay:GRID?

Return format:

$$\left\{ \begin{array}{l} \text{Off} \\ \text{On} \end{array} \right\} \langle \text{NL}^{\wedge} \text{END} \rangle$$

Where,

Off means that the current grid display mode is OFF.

On means that the current grid display mode is ON.

The :CORona command sets the corona display mode. The :CORona? query returns the current corona display mode.

Command syntax:

$$\text{DISPlay:CORona} \left\{ \begin{array}{l} \text{ON} \\ \text{OFF} \\ 1 \\ 0 \end{array} \right\}$$

Where,

1 (decimal49) is equal to ON; the corona display mode is ON.

0 (decimal48) is equal to OFF; the corona display mode is OFF.

For example: WrtCmd( "DISP: CORONA ON" ); the current corona display mode is ON.

Query syntax: DISPlay:CORona?

Return format:

$$\left\{ \begin{array}{l} \text{Off} \\ \text{On} \end{array} \right\} \langle \text{NL}^{\wedge} \text{END} \rangle$$

Where,

Off            The current corona display mode is OFF.

On             The current corona display mode is ON.

## Measure Function subsystem commands

The Measure Function subsystem commands set the measurement function. Figure 8-4 shows the command tree of the Measure Function subsystem commands.

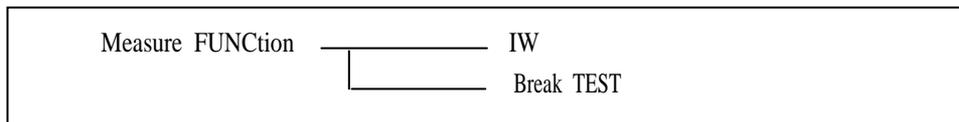


Figure 8-4 Measure Function subsystem command tree

Command syntax: MFUNction < Function name >

They are:

$$\left\{ \begin{array}{l} \text{IW} \\ \text{BTEST} \end{array} \right\}$$

Where,

IW            The measure function is in the turn-to-turn insulation test mode.

BTEST        The measure function is in the BDV test mode.

For example: WrtCmd( "MFUNC IW" ); the measure function sets to IW test mode.

Query syntax: MFUNC?

Return format:

$$\left\{ \begin{array}{l} \text{IW} \\ \text{Break TEST} \end{array} \right\} \langle \text{NL}^{\wedge} \text{END} \rangle$$

Where,

IW            The current measure function is in the turn-to-turn insulation test mode.

BTEST        The current measure function is in the BDV test mode.

## COMParator subsystem commands

The COMParator subsystem commands set the compare conditions, such as Areasize, Diffzone, Corona and Phasediff. Figure 8-5 shows the command tree of the COMParator subsystem commands.

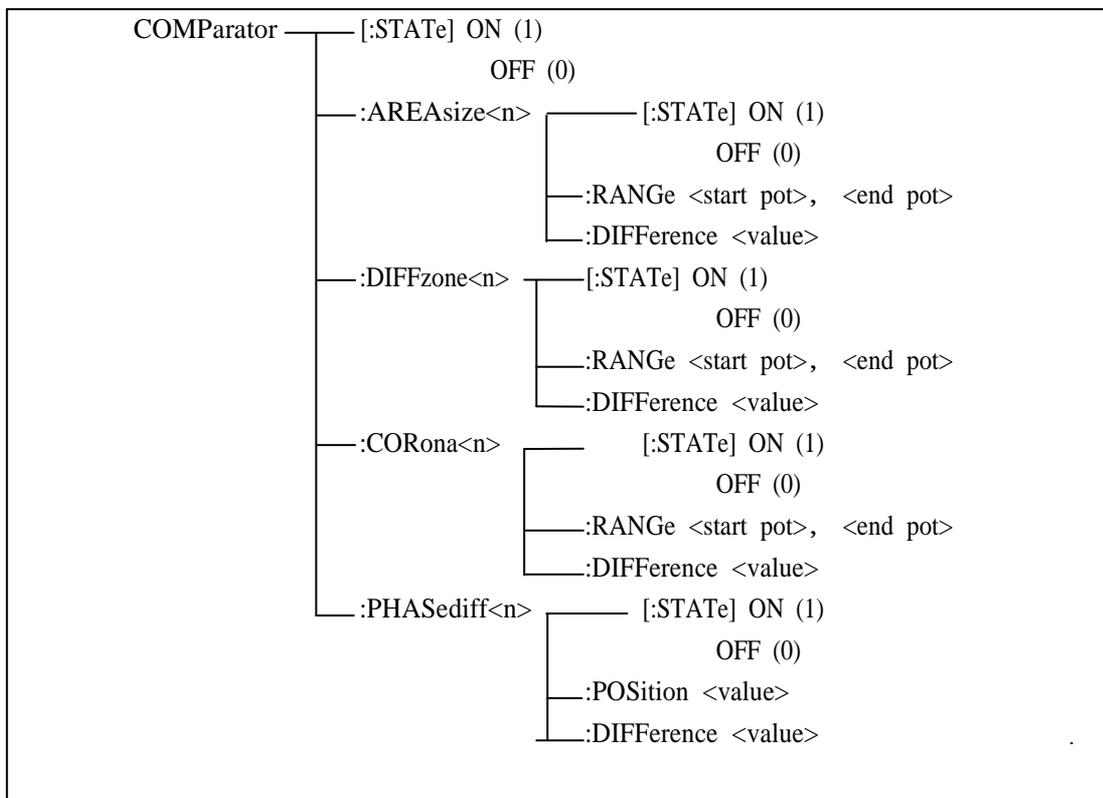


Figure 8-5 COMParator subsystem command tree

The [:STATe] command sets the comparator function to ON or OFF. The [:STATe]? query returns the current comparator state.

Command syntax:

$$\text{COMParator[:STATe]} \left\{ \begin{array}{c} \text{ON} \\ \text{OFF} \\ 1 \\ 0 \end{array} \right\}$$

Where,

1 (decimal49) is equal to ON; the comparator is ON.

0 (decimal48) is equal to OFF; the comparator is OFF.

For example: WrtCmd( "COMP ON" ); turn on the comparator function.

Query syntax: COMPArator[:STATe]?

Return format:

$$\left\{ \begin{array}{c} \text{Off} \\ \text{On} \end{array} \right\} \langle \text{NL}^{\wedge} \text{END} \rangle$$

The :AREASize[:STATe] command sets the Areasize comparator function to ON or OFF.

The :AREASize[:STATe]? query returns the current Areasize comparator state.

Command syntax:

$$\text{COMPArator:AREASize[:STATe]} \left\{ \begin{array}{c} \text{ON} \\ \text{OFF} \\ 1 \\ 0 \end{array} \right\}$$

Where,

1 (decimal49) is equal to ON.

0 (decimal48) is equal to OFF.

For example: WrtCmd( "COMP:AREA ON" ); turn on the Areasize comparator function.

Query syntax: COMPArator:AREASize[:STATe]?

Return format:

$$\left\{ \begin{array}{c} \text{Off} \\ \text{On} \end{array} \right\} \langle \text{NL}^{\wedge} \text{END} \rangle$$

The :AREASize:RANGe command sets the comparison range of Areasize comparator.

The :AREASize:RANGe? query returns the current comparison range of Areasize comparator.

Command syntax: COMPArator:AREASize:RANGe <start pot>, <end pot>

Where,

<start pot> start point of comparison range. NR1 format, range from 0 to 6500, without unit.

<end pot> end point of comparison range. NR1 format, range from 0 to 6500, without unit.

For example: WrtCmd( "COMP:AREA:RANG 0,6500" ); set the comparison range from 0 to 6000.

**① NOTE: The end point value should be larger than that of the start point; otherwise an error message will be displayed on the system message line.**

Query syntax: COMP:AREA:RANG ?

Return format: <start pot>, <end pot><NL^END>

start pot, end pot are NR1format.

The :AREASize:DIFFerence command sets the difference limit value of Areasize comparator.

The :AREASize:DIFFerence? query returns the current difference limit value of Areasize

comparator.

Command syntax: COMPArator:AREASize:DIFFerence <value>

Where

<value> can be NR1, NR2 or NR3 format without unit.

For example: WrtCmd( "COMP:AREA:DIFF 2.5" ); set the difference limit value to 2.5%.

① **NOTE: The <value> here is a percent value, For example, input 2.5 for 2.5%.**

Query syntax: COMPArator:AREASize:DIFFerence ?

Return format: <NR2><NL^END>

The :DIFFzone[:STATe] command sets the Diffzone comparator to ON or OFF.

The :DIFFzone[:STATe]? query returns the current Diffzone comparator state.

Command syntax:

$$\text{COMPArator:DIFFzone[:STATe]} \left\{ \begin{array}{c} \text{ON} \\ \text{OFF} \\ 1 \\ 0 \end{array} \right\}$$

Where,

1 (decimal 49)            When the function is ON

0 (decimal 48)            When the function is OFF

For example: WrtCmd( "COMP:DIFF ON" ); turn on the Diffzone comparator.

Query syntax: COMPArator:DIFFzone[:STATe] ?

Return format:

$$\left\{ \begin{array}{c} \text{Off} \\ \text{On} \end{array} \right\} \text{<NL^END>}$$

The :DIFFzone:RANGe command sets the comparison range of the Diffzone comparator.

The :DIFFzone:RANGe? query returns the current comparison range of the Diffzone comparator.

Command syntax: COMPArator:DIFFzone:RANGe <start pot>, <end pot>

Where,

<start pot> start point of comparison range. NR1 format, range from 0 to 6000, without unit.

<end pot> end point of comparison range. NR1 format, range from 0 to 6000, without unit.

For example: WrtCmd("COMP:DIFF:RANG 0,6000 "); set the comparison range from 0 to 6000.

① **NOTE: The end point value should be larger than that of the start point; otherwise an error message will be displayed on the system message line.**

Query syntax: COMP:DIFF:RANG ?

Return format: <start pot>, <end pot><NL^END>

start pot, end pot are NR1 format.

The :DIFFzone:DIFFerence command sets the difference limit value of Diffzone comparator. The :DIFFzone:DIFFerence? query returns the current difference limit value of the Diffzone comparator.

Command syntax: COMPArator:DIFFzone:DIFFerence <value>

Where,

<value> can be NR1, NR2 or NR3 format without unit.

For example: WrtCmd( "COMP:AREA:DIFF 2.5" ); set the difference limit value to 2.5%.

① **NOTE: Here <value> is a percent value, for example, input 2.5 for 2.5%.**

Query syntax: COMPArator:DIFFzone:DIFFerence ?

Return format: <NR2><NL^END>

The :COROna[:STATe] command sets the Corona comparator to ON or OFF.

The :COROna[:STATe]? query returns the current Corona comparator state.

Command syntax:

$$\text{COMPArator:COROna[:STATe]} \left\{ \begin{array}{c} \text{ON} \\ \text{OFF} \\ 1 \\ 0 \end{array} \right\}$$

Where,

1 (decimal 49)            When the function is ON

0 (decimal 48)            When the function is OFF

For example: WrtCmd( "COMP:CORO ON" ); turn on the Corona comparator.

Query syntax: COMPArator:COROna[:STATe] ?

Return format:

$$\left\{ \begin{array}{c} \text{Off} \\ \text{On} \end{array} \right\} \text{ <NL^END>}$$

The :COROna:RANGe command sets the comparison range of the Corona comparator.

The :COROna:RANGe? query returns the current comparison range of the Corona comparator.

Command syntax: COMPArator:COROna:RANGe <start pot>, <end pot>

Where,

<start pot> start point of comparison range. NR1 format, range from 0 to 6000, without unit.

<end pot> end point of comparison range. NR1 format, range from 0 to 6000, without unit.

For example: WrtCmd( "COMP:CORO:RANG 100,200" ); set the comparison range from 100 to 200.

① **NOTE: The end point value should be larger than that of the start point; otherwise an error message will be displayed on the LCD screen.**

Query syntax: COMP:CORO:RANG?

Return format: <start pot>, <end pot><NL^END> start pot, end pot are NR1 format.

The :COROna:DIFFerence command sets the difference limit value of the Corona comparator. The :COROna:DIFFerence? query returns the current difference limit value of the Corona comparator.

Command syntax: COMPArator:COROna:DIFFerence <value>

Where,

<value> is NR1 format, range from 0 to 256 without unit.

For example: WrtCmd( "COMP:CORO:DIFF 20" ); set the difference value to 20.

Query syntax: COMPArator:COROna:DIFFerence?

Return format: <NR1><NL^END>

The :PHASediff[:STATe] command sets the Phasediff comparator to ON or OFF. The :PHASediff[:STATe]? query returns the current Phasediff comparator state.

Command syntax:

$$\text{COMPArator:PHASediff[:STATe]} \left\{ \begin{array}{c} \text{ON} \\ \text{OFF} \\ 1 \\ 0 \end{array} \right\}$$

Where,

1 (decimal 49) When the function is ON

0 (decimal 48) When the function is OFF

For example: WrtCmd( "COMP:PHAS ON" ); turn on the Phasediff comparator.

Query syntax: COMPArator:PHASediff[:STATe]?

Return format:

$$\left\{ \begin{array}{c} \text{Off} \\ \text{On} \end{array} \right\} \text{<NL^END>}$$

The :PHASediff:POSItion command sets which zero-crossing point is used in the Phasediff comparator. The :PHASediff:POSItion? query returns the zero-crossing position value of the Phasediff comparator.

Command syntax: COMPArator:PHASediff:POSItion <value>

Where,

<value> Zero-crossing position value, NR1 format, range from 1 to 99 without unit.

For example: WrtCmd( "COMP:PHAS:POSI 3" ); the third zero-crossing point is used.

Query syntax: COMP:PHAS:POSI?

Return format: <NR1><NL^END>

The :PHASediff:DIFFerence command sets the difference limit value of the Phasediff comparator. The :PHASediff:DIFFerence? query returns the current difference limit value of the Phasediff comparator.

Command syntax: COMParator:PHASediff:DIFFerence <value>

Where,

<value> can be NR1, NR2 or NR3 format without unit.

For example: WrtCmd( "COMP:PHAS:DIFF 2.5" ); set the difference limit value to 2.5%.

① **NOTE: Here <value> is a percent value, for example, input 2.5 for 2.5%.**

Query syntax: COMParator:PHASediff:DIFFerence ?

Return format: <NR2><NL^END>

For Multi-channel instrument, You can also use the [COMParator:AREA<n>, COMParator:DIFF<n>, COMParator:COR<n>, COMParator:PHAS<n>] command to set the comparator limit value of specified multiple windings. For two-channel instrument „n“ is 1~2, For four-channel instrument „n“ is 1~4. In Multi-winding and Multi-standard test, Those [COMParator:AREA<n>, COMParator:DIFF<n>, COMParator:COR<n>, COMParator:PHAS<n>] command can be used to set the comparator para of multi-winding, At other times, the [COMParator:AREA, COMParator:DIFF, COMParator:COR, COMParator:PHAS] command is used to set up the comparator para.

### Impulse VOLTage subsystem commands

The Impulse VOLTage subsystem commands set the impulse voltage, average times, impulse voltage auto adjust and delay, etc. Figure 8-6 shows the Impulse VOLTage subsystem command tree.

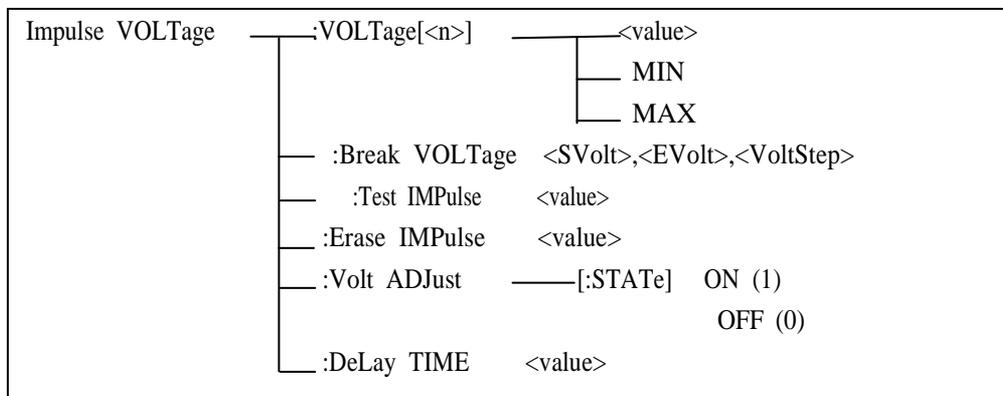


Figure 8-6 Impulse VOLTage subsystem command tree

The [:VOLTage] command sets the impulse voltage for testing. The [:VOLTage]? query returns the current impulse voltage value.

Command syntax:

$$\text{IVOLTage[:VOLTage]} \left\{ \begin{array}{l} \langle \text{value} \rangle \\ \text{MIN} \\ \text{MAX} \end{array} \right\}$$

Where,

$\langle \text{value} \rangle$  can be NR1, NR2 or NR3 format followed by KV or V and the value must be between 100V to 5000V.

MIN Set the impulse voltage to 100V.

MAX Set the impulse voltage to 5000V.

For example: WrtCmd( "IVOLT:VOLT 1000V" ); set the impulse voltage to 1000V.

Query syntax: IVOLTage[:VOLTage]?

Return format:  $\langle \text{NR1} \rangle \langle \text{NL} \rangle \langle \text{END} \rangle$

**①NOTE: The query returns no unit, and the default voltage unit is V.**

For Multi-channel instrument, You can also use the [:VOLTage<n>] command to set the impulse voltage value of specified multiple windings. For two-channel instrument „n“ is 1~2, For four-channel instrument „n“ is 1~4. In Multi-winding and Multi-standard test, The [IVOLTage:VOLTage<n>] command can be used to set the voltage of multi-winding, At other times, the [IVOLTage:VOLTage] command is used to set up the pulse voltage.

The :BVOLTage command sets parameters for Break Test. The :BVOLTage? query returns the current voltage for Break Test.

Command syntax:

$$\text{IVOLTage:BVOLTage} \quad \langle \text{SVolt} \rangle, \langle \text{EVolt} \rangle, \langle \text{VoltStep} \rangle$$

Where

$\langle \text{SVolt} \rangle$  The start voltage for Break Test can be NR1, NR2 or NR3 format followed by unit. The set start voltage ranges from 100V to 5000V and is less than  $\langle \text{EVolt} \rangle$ .

$\langle \text{EVolt} \rangle$  The end voltage for Break Test can be NR1, NR2 or NR3 format followed by unit. The set end voltage ranges from 100V to 5000V and is larger than  $\langle \text{SVolt} \rangle$ .

$\langle \text{VoltStep} \rangle$  The voltage step for Break Test can be NR1, NR2 or NR3 format. The set voltage step ranges from 1% to 50% of the  $\langle \text{SVolt} \rangle$ .

For example: WrtCmd( "IVOLT:BVOLT 1000V,2KV,15" ); set the start voltage to 1000V, end voltage to 2000V and voltage step to  $1000 * 0.15 = 150\text{V}$ .

Query syntax: IVOLT:BVOLT?

Return format:  $\langle \text{NR1} \rangle, \langle \text{NR1} \rangle, \langle \text{NR1} \rangle \langle \text{NL} \rangle \langle \text{END} \rangle$

① **NOTE: The query for Break VOLTage returns no unit and the default voltage unit is V.**

The :TIMPulse command sets the average times for testing. The :TIMPulse? query returns the current average times.

Command syntax: IVOLTage:TIMPulse <value>

Where,

<value1> is NR1 format ranging from 1 to 99 without unit.

For example: WrtCmd( "IVOLT: TIMPulse 20" ); set the average times to 20.

Query syntax: IVOLTage:TIMPulse?

Return format: <NR1><NL^END>

The :EIMPulse command the times of erasing impulses for testing. The :EIMPulse? query returns the current times of erasing impulses.

Command syntax: IVOLTage: EIMPulse <value>

Where,

<value> is NR1 format ranging from 0 to 15 without unit.

For example: WrtCmd( "IVOLT: EIMPulse 4" ); set the times to 4.

Query syntax: IVOLTage:EIMPulse?

Return format: <NR1><NL^END>

The :VADJust command sets the impulse auto adjust function to ON or OFF.

The :VADJust? query returns the current state of the impulse auto adjust function.

Command syntax:

$$\text{IVOLTage:VADJust} \left\{ \begin{array}{l} \text{ON} \\ \text{OFF} \\ 1 \\ 0 \end{array} \right\}$$

Where,

1 (decimal 49)      When the function is ON

0 (decimal 48)      When the function is OFF

For example: WrtCmd( "IVOLT:VADJ OFF" ); turn off the voltage auto adjust function.

Query syntax: IVOLTage:VADJust?

Return format:

$$\left\{ \begin{array}{l} \text{Off} \\ \text{On} \end{array} \right\} \text{ <NL^END>}$$

The :DTIME command sets the delay time between two tests in the INT test mode. The :DTIME? query returns the current delay time.

Command syntax: IVOLTage:DTIME <value>

Where,

<value> can be NR1, NR2 or NR3 format followed by s or ms. The set delay time ranges from 0 to 99.9s.

For example: WrtCmd( "IVOLT:DTIME 1s" ); set the delay time to 1s.

Command syntax: IVOLTage:DTIME ?

Return format: <NR2><NL^END>

① **NOTE** : The query of delay time returns no unit and the default unit is s.

## Sample RATE subsystem commands

The Sample RATE subsystem commands set the sample rate and the time base zoom. Figure 6-5 shows the Sample RATE subsystem command tree.

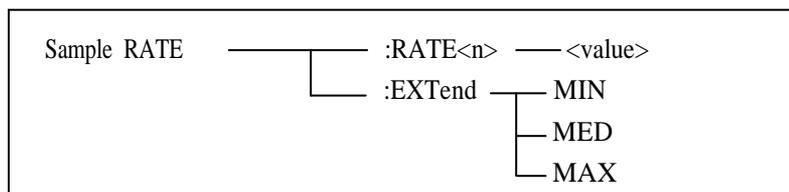


Figure 8-7 Sample RATE subsystem command tree

The :RATE command sets the sample rate. The :RATE? query returns the current sample rate.

Command syntax: SRATE:RATE <value>

Where,

<value> The available values are listed as follows:

200MSa/s, 100MSa/s, 50MSa/s, 20MSa/s, 10MSa/s, 5MSa/s, 2MSa/s, 1MSa/s, 500kSa/s, 200kSa/s, 100kSa/s,

200M, 100M, 50M, 20M, 10M, 5M, 2M, 1M, 500k, 200k, 100k

For example: WrtCmd( "SRATE:RATE 100MSa/s" ); 100MSa/s.

☞ **NOTE**: When PT50xx is not in the test state, SRATE[:RATE] command changes the current sample rate. When PT50xx is in the test state, three cases may occur.

When the standard waveform is tested in the mode of SEQ CYCLE or SINGLE SAMPLE, this command will be ignored.

When the standard waveform is tested in the mode of SINGLE CYCLE, if the test has not put an end, this command will be ignored; if the test is nearly finished, this command will select the standard waveforms under different sample rate.

When the tested device is under test, this command will be ignored.

Command syntax: SRATE:RATE ?

Return format:

$$\left. \begin{array}{l} 100\text{MSa/s} \\ 50\text{MSa/s} \\ 20\text{MSa/s} \\ 10\text{MSa/s} \\ 5\text{MSa/s} \\ 2\text{MSa/s} \\ 1\text{MSa/s} \end{array} \right\} \langle \text{NL}^{\wedge} \text{END} \rangle$$

For Multi-channel instrument, You can also use the [SRATE:RATE<n>] command to set the current sample rate of specified multiple windings. For two-channel instrument „n“ is 1~2, For four-channel instrument „n“ is 1~4. In Multi-winding and Multi-standard test, The [SRATE:RATE<n>] command can be used to set the sample rate of multi-winding, At other times, the [SRATE:RATE] command is used to set up the sample rate.

The :EXTend command sets the time base zoom function. The :EXTend? query returns the current value of the time base zoom.

Command syntax:

$$\text{SRATE:EXTend} \quad \left\{ \begin{array}{l} \text{MIN} \\ \text{MED} \\ \text{MAX} \end{array} \right\}$$

Where,

MIN Set to display all 960 points of the waveform, which means the timer shaft is not extended.

MED Set to display the first 480 points of the waveform, which means the timer shaft is extended to one times the original one.

MAX Set to display the first 240 points of the waveform, which means the timer shaft is extended to two times the original one.

For example: WrtCmd( “SRATE:EXT MIN” ); set to display all 960 points of the waveform.

☞ **NOTE: In the process of testing, this command will be ignored.**

Query syntax: SRATE:EXTend?

Return format:

$$\left\{ \begin{array}{l} \text{MIN} \\ \text{MED} \\ \text{MAX} \end{array} \right\} \langle \text{NL}^{\wedge} \text{END} \rangle$$

## Standard WAVE subsystem commands

The Standard WAVE subsystem commands set the parameters for sampling the standard waveform, including setting the standard waveform sample mode, triggering the measurement of a standard waveform and choosing a sampled standard waveform. Figure 8-8 shows the Standard WAVE

subsystem command tree.

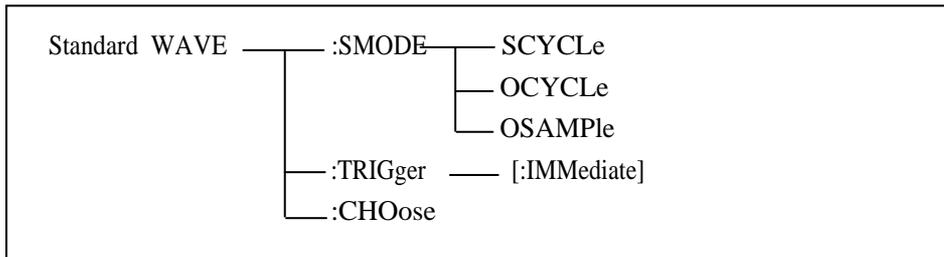


Figure 8-8 Standard WAVE subsystem command tree

The :SMODE command sets the sample mode of the standard waveform. The :SMODE? query returns the current sample mode.

Command syntax:

$$\text{SWAVE:SMODE} \left\{ \begin{array}{l} \text{SCYCLe} \\ \text{OCYCLe} \\ \text{OSAMPl e} \end{array} \right\}$$

Where,

SCYCLe Set the standard waveform sample mode to sequential-cycle.

OCYCLe Set the standard waveform sample mode to one-cycle.

OSAMPl e Set the standard waveform sample mode to one-sample.

For example: WrtCmd( "SWAVE:SMODE OSAMPl e" ); set the standard waveform sample mode to one-sample.

Query syntax: SWAVE:SMODE?

Return format:

$$\left\{ \begin{array}{l} \text{SEQ CYCLE} \\ \text{ONE CYCLE} \\ \text{ONE SAMPLE} \end{array} \right\} \langle \text{NL}^{\wedge} \text{END} \rangle$$

Where: SEQ CYCLE is sequence-cycle mode, ONE CYCLE is one-cycle mode, ONE SAMPLE is one-sample mode.

The :TRIGger[:IMMediate] command is used to trigger a standard waveform measurement.

Command syntax: SWAVE:TRIGger[:IMMediate]

For example: WrtCmd( "SWAVE:TRIG" ) ;

① **NOTE: 1.This command is available only on the <MEAS DISP> page.**

**2. This command will be ignored if the trigger mode is not set to BUS mode.**

**3. This command will be ignored when PT50xx is in testing state.**

☞ **NOTE: The :TRIGger[:IMMediate] command starts a measurement of standard waveform and PT50xx returns the standard waveform data directly without receiving the FETCh SWAVE? command. In SEQ CYCLE mode, PT50xx returns standard waveform data when each sampling test is completed. In ONE CYCLE mode, PT50xx returns the last standard**

**waveform, and returns the standard waveform when sample rate is changed.**

The :CHOose command is used to select the required standard waveform.


Command syntax: SWAVE:CHOose

For example: WrtCmd( "SWAVE:CHO" ) ;

① **NOTE: 1. This command is available only on <MEAS DISP> page.**

**2. This command is valid only when sampling test is finished in SEQ CYCLE mode or ONE CYCLE mode.**

## Wave Adjust subsystem commands

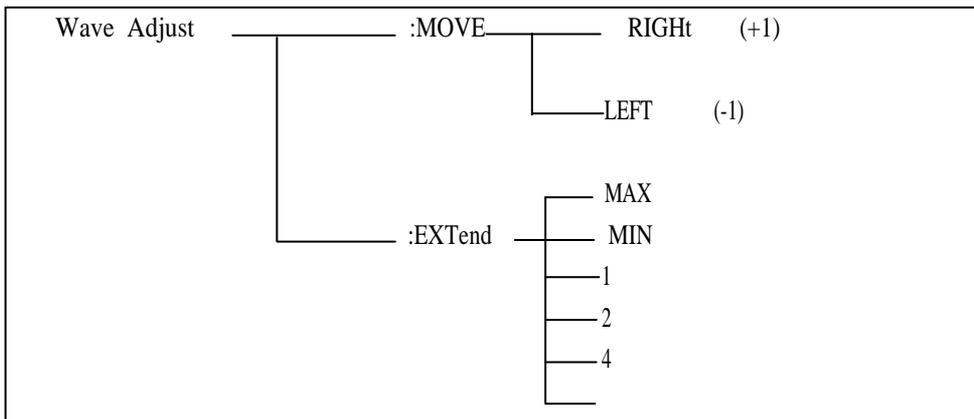

Wave Adjust subsystem commands

The :MOVE command sets the move of the waveform.

Command format:

$$\text{WADJust:MOVE} \left\{ \begin{array}{c} \text{RIGHT} \\ +1 \\ \text{LEFT} \\ -1 \end{array} \right\}$$

Where,

RIGHT	Move the waveform to the right.
+1	Move the waveform to the right.
LEFT	Move the waveform to the left.
-1	Move the waveform to the left.

The :EXTend command is used to extend the waveform.

Command format:

$$\text{WADJust:EXTend} \left\{ \begin{array}{c} \text{MAX} \\ \text{MIN} \\ 1 \\ 2 \\ 4 \\ 8 \end{array} \right\}$$

Where,

MAX	Extend the waveform 8 times the original size, which is to its maximum size.
MIN	Not to extend the waveform.
1	Not to extend the waveform.
2	Extend the waveform 2 times.
4	Extend the waveform 4 times.
8	Extend the waveform 8 times.

## STATistic subsystem commands

The STATistic subsystem commands set the statistic function to ON or OFF, clear or save statistic data. Figure 8-9 shows the STATistic subsystem command tree.

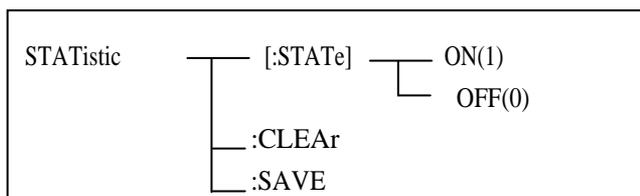


Figure 8-9 STATistic subsystem command tree

The [:STATe] command sets the statistic function to ON or OFF. The [:STATe]? query returns the current state of the statistic function.

Command syntax:

$$\text{STATistic[:STATe]} \left\{ \begin{array}{l} \text{ON} \\ \text{OFF} \\ 1 \\ 0 \end{array} \right\}$$

Where,

1 (decimal 49)      When the function is ON

0 (decimal 48)      When the function is OFF

For example: WrtCmd( "STAT ON" ); turn on the statistic function.

Query syntax: STATistic[:STATe]?

Return format:<NR1><NL^END>

The :CLEAR command is used to clear the statistic data.

Command syntax: STATistic:CLEAR

The :SAVE command is used to save the statistic data to a file.

Command syntax: STATistic:SAVE

## MWINDing subsystem commands

The MWINDing subsystem command group is used to set multi-channel instruments for test coil types, working mode, standard mode, test coil and other parameters. Figure 8-10 shows the MWINDing subsystem command tree.

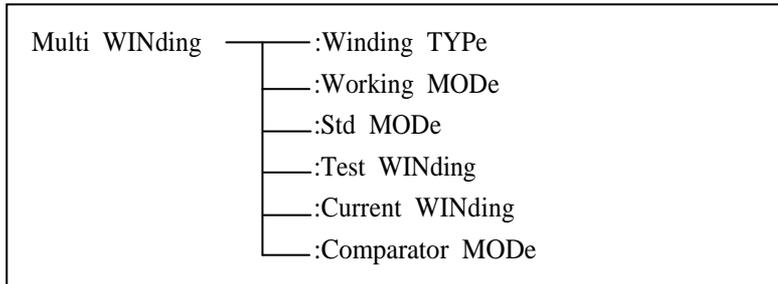


Figure 8-10 MWINDing subsystem command tree

The [:Winding TYPE] Command sets coil type.

Command syntax:

MWINDing:Winding TYPE { 1COIL  
2COIL  
3COIL  
4COIL  
3P3W  
3P4W }

Where

- 1COIL Set the meter measure coil type to one coil
- 2COIL Set the meter measure coil type to two coil
- 3COIL Set the meter measure coil type to three coil
- 4COIL Set the meter measure coil type to four coil
- 3P3W Set the meter measure coil type to three phase three wire
- 3P4W Set the meter measure coil type to three phase four wire

Query syntax: MWINDing:Winding TYPE?

For example: WrtCmd( "MWIN:WTYPE?" ) ;

Return format:

{ 1COIL  
2COIL  
3COIL  
4COIL  
3P3W  
3P4W } <NL^END>

**ⓘ NOTE: Two-channel meter is only set 1COL and 2COIL.**

The [:Working MODE] Command sets meter working mode.

Command syntax:

$$\text{MWINDing:Working MODE} \left\{ \begin{array}{l} \text{NORMal} \\ \text{BALance} \end{array} \right\}$$

Where

NORMal Set the instrument work in normal working mode

BALance Set the instrument work in balance working mode

Query syntax: MWINDing:WorkingMODE?

For example: WrtCmd( "MWIN:WMODE?" ) ;

Return format:

$$\left\{ \begin{array}{l} \text{NORMal} \\ \text{BALance} \end{array} \right\} \langle \text{NL}^{\wedge} \text{END} \rangle$$

The [:Std MODE] Command sets meter standard mode.

Command syntax:

$$\text{MWINDing:StdMODE} \left\{ \begin{array}{l} \text{SingleSTD} \\ \text{MultiSTD} \end{array} \right\}$$

Where

SingleSTD Set the instrument work in single standard mode

MultiSTD Set the instrument work in multi standard mode

Query syntax: MWINDing: StdMODE?

For example: WrtCmd( "MWIN:StdMODE?" ) ;

Return format:

$$\left\{ \begin{array}{l} \text{SSTD} \\ \text{MSTD} \end{array} \right\} \langle \text{NL}^{\wedge} \text{END} \rangle$$

The [:TestWINDing] Command sets meter test winding.

Command syntax:

$$\text{MWINDing:TWINDing} \langle \text{string} \rangle$$

Query syntax: MWINDing: TWINDing?

For example: WrtCmd( "MWIN:TWINDing?" ) ;

Return format: <string><NL^END>

Where <string>:

One coil: AG, BG, CG, DG  
 Two Coil: AG-BG, CG-DG, AB-CD  
 Three coil: AG-BG-CG, AB-BC-AC  
 Four coil: AG-BG-CG-DG  
 Three phase three wire: AB-BC-AC  
 Three phase four wire: AG-BG-CG

The [:CurrentWinding] Command sets meter current winding.

Command syntax:

MWINDing: CWINDing <string>

Query syntax: MWINDing: CWINDing?

For example: WrtCmd( "MWIN: CWINDing?" ) ;

Return format: <string><NL^END>

Where <string>:

One coil: AG,/BG/ CG/ DG  
 Two Coil: AG, BG/ CG, DG/ AB, CD  
 Three coil: AG, BG CG/ AB, BC, AC  
 Four coil: AG, BG, CG, DG  
 Three phase three wire: AB, BC, AC  
 Three phase four wire: AG, BG, CG

The [:Comparator MODE] Command sets meter comparator mode.

Command syntax:

MWINDing: CMODE  $\left\{ \begin{array}{l} \text{PUBLiC} \\ \text{ALONe} \end{array} \right\}$

Where

PUBLiC Set the instrument work in Public comparison mode

ALONe Set the instrument work in Alone comparison mode

Query syntax: MWINDing: CMODE?

For example: WrtCmd( "MWIN: CMODE?" ) ;

Return format:

$\left\{ \begin{array}{l} \text{PUBLiC} \\ \text{ALONe} \end{array} \right\} <NL^END>$

## TRIGger subsystem commands

The TRIGger subsystem command group is used to trigger a measurement or to set the trigger mode. Figure 8-11 shows the TRIGger subsystem command tree.

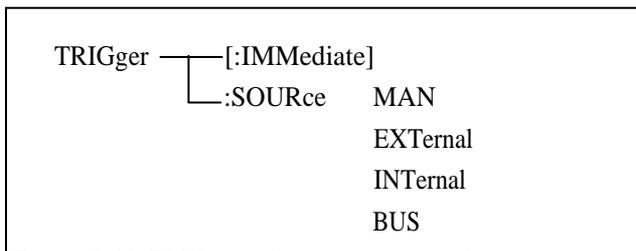


Figure 8-11 TRIGger subsystem command tree

The [:IMMediate] command triggers a measurement.

Command syntax: TRIGger[:IMMediate]

For example: WrtCmd( "TRIG" ) ;

① **NOTE: The TRIGger[:IMMediate] command, available only in the <MEAS DISP> page, will be ignored when PT50xx is in the testing state. The trigger mode must be set to BUS mode, or this command will be ignored. This command is only used to trigger the test of DUT. Refer to Standard WAVE subsystem commands for the details of triggering standard waveform test.**

The :SOURce command sets the trigger mode. The :SOURce? query returns the current trigger mode.

Command syntax:

$$\text{TRIGger:SOURce} \left\{ \begin{array}{l} \text{MAN} \\ \text{EXTernal} \\ \text{INTernal} \\ \text{BUS} \end{array} \right\}$$

Where,

MAN Triggered by pressing the **START** button or using foot control switch

EXTernal Triggered by the HANDLER interface.

INTernal Automatically triggered after pressing the **START** button.

BUS Triggered by RS232 interface, USB or LAN interface.

For example: WrtCmd("TRIG:SOUR BUS"); set to bus mode.

Query syntax: TRIGger:SOURce?

Return format:

$$\left\{ \begin{array}{l} \text{Man} \\ \text{Int} \\ \text{Ext} \\ \text{Bus} \end{array} \right\} \langle \text{NL}^{\wedge} \text{END} \rangle$$

## FETCh ? subsystem commands

The FETCh? subsystem commands are used to output waveform data, comparison results, output voltage, frequency and time measurement result. Figure 8-12 shows the FETCh? subsystem command tree.

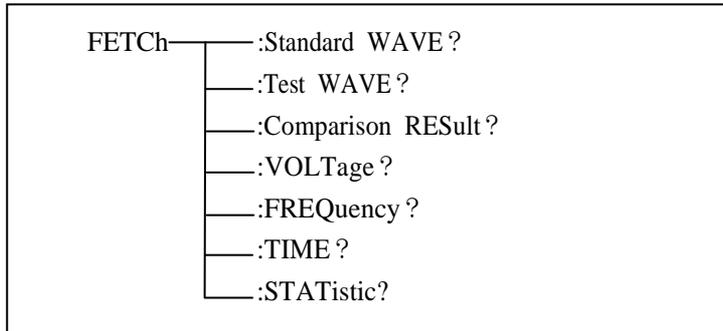


Figure 8-12 FETCh? subsystem command tree

The :Standard WAVE? query outputs the current standard waveform data.

Query syntax: FETCh:SWAVE?

For example: WrtCmd( "FETC:SWAVE?" ) ;

The :Test WAVE? Query outputs the latest tested waveform data.

Query syntax: FETCh:TWAVE?

For example: WrtCmd( "TRIG:SOUR BUS" ) ;

WrtCmd( "TRIG" ) ;

WrtCmd( "FETC:TWAVE?" ) ;

### NOTE:

**If the waveform data is not ready, the FETCh SWAVE? and FETCh TWAVE? query will be executed after the current measurement or next measurement is finished.**

**Refer to the previous section Data Format for the returned data format.**

The Comparison RESult? query returns the latest comparison result.

Query syntax: FETCh:CRESt?

Return format: There are three cases as follows:

1. If the comparator function or four comparison methods is set to OFF, the query response will be <NR1><NL^END>, here NR1 is 2.
2. If there is no waveform data available, the return format will be <NR1><NL^END>, here NR1 is 3.
3. If the comparator function is set to on, the return format will be <NR1, NR3, NR3, NR1, NR3><NL^END>, the first NR1 is the general comparison result: 1 (PASS)

or 0 (FAIL). The following four data are the comparison results corresponding to each comparator: AREA SIZE, DIFF ZONE, CORONA and PHASE DIFF.

**① NOTE: PT50xx returns the comparison result when the comparator is turned on. PT50xx returns 9.9E37 when the AREA SIZE, DIFF ZONE or PHASE DIFF comparator is turned off. PT50xx returns 9999 when the CORONA comparator is turned off.**

The :VOLTage? query returns the current voltage value in the set voltage range. Refer to MEASure subsystem commands for the voltage range settings.

Query syntax: FETCh:VOLTage?

Return format: <NR1><NL^END>

**☞ NOTE: The unit of the returned voltage is V.**

The :FREQuency? query returns the current frequency result in the set frequency range. Refer to MEASure subsystem commands for the frequency range settings.

Query syntax: FETCh:FREQuency?

Return format: <NR3><NL^END>

**☞ NOTE: The unit of the returned frequency is Hz. If the start point is overlapped with the end cursor completely, then 9.9E37 will be returned.**

The :TIME? query returns the current time result in the set time range. Refer to MEASure subsystem commands for the time range settings.

Query syntax: FETCh:TIME?

Return format: <NR3><NL^END>

**☞ NOTE: The unit of the returned time is s.**

The :STATistic? query returns the current statistic result.

Query syntax: FETCh:STATistic?

Return format: <NR1>, <NL^END>

The returned data are in turn as follows: total test times and times of PASS, total test times for Area Size comparison and times of PASS, total test times for Diff Zone comparison and times of PASS, total test times for Corona comparison and times of PASS, total times for Phase Diff comparison and times of PASS. PASS rate can be automatically calculated according to the returned data.

For Multi-channel instrument, You must be change to current winding, then send the corresponding command to read waveform data. Please reference[**MWINDing:CWINDing**] command.

## MEASure subsystem commands

The MEASure subsystem commands sets the measurement range of voltage, frequency and time. Figure 8-13 shows the MEASure subsystem command tree.

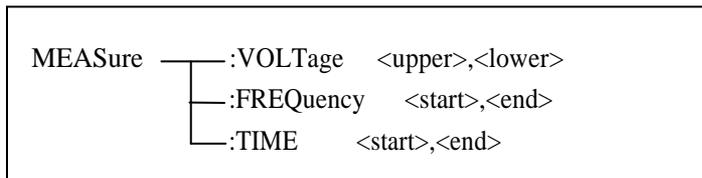


Figure 8-13 MEASure subsystem command tree

The :VOLTage command sets the measurement range of voltage. The :VOLTage? query returns the current voltage range.

Command syntax: MEASure:VOLTage <upper>,<lower>

Where,

<upper> is the upper limit of voltage, NR1 format, ranging from 1 to 255 without unit.

<lower> is the lower limit of the voltage, NR1 format, ranging from 1 to 255 without unit.

For example: WrtCmd( "MEAS:VOLT 1,199" ); set the voltage to range from 1 to 199.

**NOTE: The lower limit must be less than the upper one; otherwise an error message will be displayed on the system message line.**

Query syntax: MEASure:VOLTage ?

Return format: <upper>,<lower><NL^END>

Both upper limit and lower limit are NR1 format.

The :FREQUENCY command sets the frequency range. The :FREQUENCY? query returns the currently set frequency range.

Command syntax: MEASure:FREQUENCY <start>,<end>

Where,

<start> is the start point of frequency, NR1 format and ranging from 1 to 600 without unit.

<end> is the end point of frequency, NR1 format and ranging from 1 to 600 without unit.

For example: WrtCmd( "MAES:FREQ 100,200" ); set the frequency to range from 100 to 200.

**NOTE: The value of the end point must be larger than that of the start point; otherwise an error message will be displayed on the system message line.**

**NOTE: The measurement ranges of frequency and time are the same, thus the time range will vary with the frequency range.**

Query syntax: MEASure:FREQUENCY ?

Return format: <start>,<end><NL^END>

Both <start> and <end > are NR1 format.

The :TIME command sets the time range. The :TIME? query returns the current time range.

Command syntax: MEASure:TIME <start>,<end>

Where,

<start> is the start point of time, NR1 format and ranging from 1 to 600 without unit.

<end> is the end point of time, NR1 format and ranging from 1 to 600 without unit.

For example: WrtCmd( "MAES:TIME 100,200" ); set the time to range from 100 to 200.

**① NOTE: The value of the end point must be larger than that of the start point; otherwise an error message will be displayed on the system message line.**

**☞ NOTE: The measurement ranges of frequency and time are the same, thus the time range will vary with the frequency range.**

Query syntax: MEASure:TIME ?

Return format: <start>,<end><NL^END>

Both <start> and <end> are NR1 format.

## ABORt subsystem command

PT50xx will abort the current measurement as soon as the ABORt command is received.

Command syntax: ABORt

For example: WrtCmd( "ABOR" ) ;

## Mass MEMory subsystem commands

The Mass MEMory subsystem commands load and store files. Figure 8-14 shows the Mass MEMory subsystem command tree.

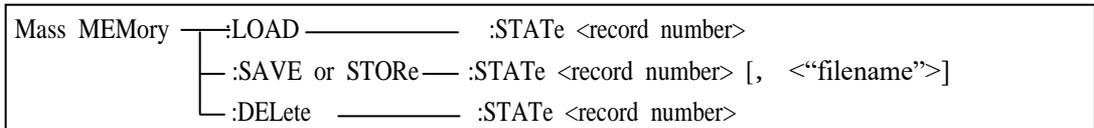


Figure 8-14 Mass MEMory subsystem command tree.

**① NOTE: The Mass MEMory subsystem commands will be ignored in the phase of testing.**

The :LOAD:STATe command is used to load the stored file.

Command syntax: MMEMory:LOAD:STATe <record number>

Where,

<record number> is the file serial number ranging from 1 to 60 without unit.

For example: WrtCmd("MMEM:LOAD:STAT 1"); load file 1.

**① NOTE: 1. If the file you want to load is not available, “File not exist” message will be displayed on the system message line.**

**2. If the input file number is out of 1 to 60, message “Out of file range” will be displayed on the system message line.**

☞ **NOTE: The file contains the page information. When a file is loaded, PT50xx will display the saved page.**

The :SAVE:STATe or STORE:STATe command is used to save the current setting data to a file.

Command syntax: MMEMory:STORE:STATe <record number> [,<“filename”>]

Where,

<record number> is the file serial number ranging from 1 to 60 , NR1 format without unit.

<“filename”> The file name consists of less than 12 ASCII characters. <Unnamed> will be the default name, if you don’t input a file name.

For example: WrtCmd(“MMEM:STOR:STAT 1, “#PT50xx\*”) ;

① **NOTE: 1. PT50xx will not give a warning message when the existent file is to be over written.**

**2. PT50xx will display warning message “Test standard wave first” on the system message line when you try to save a file without the standard waveform data.**

☞ **NOTE : The file name assigned by bus will be quoted without any change, thus user can enter some special characters such as special symbols and letters in lower case that cannot be input on the panel of the instrument.**

The :DELeTe:STATe command deletes a file.

Command syntax: MMEMory:DELeTe:STATe <record number>

Where,

<record number> is the file serial number ranging form 1 to 60, NR1 format without unit.

For example: WrtCmd( “MMEM:DEL:STAT 1” ); delete file 1.

① **NOTE: PT50xx will not give a warning message when a file is to be deleted.**

## Local Control subsystem commands

The Local Control subsystem command is used to terminate bus control state and to return to local control state.

Command syntax: LCONTROL or LCON

For example: WrtCmd( “LCON” ) ;

WrtCmd( “LCONTROL” ) ;

## Common commands

PT50xx provides following common commands:

### \*RST

The \*RST command is used to reset the instrument.

Command syntax: \*RST

For example: WrtCmd( “\*RST” ) ;

**\*TRG**

The \*TRG command (trigger command) triggers a measurement and writes the tested waveform data into the output buffer. This command is equal to TRIG+FETCh TWAVE? command.

Command syntax: \*TRG ?

For example: WrtCmd( “\*TRG ?” ) ;

① **NOTE: This command is only available on the <MEAS DISP> pages. This command will also be ignored when PT50xx is in the testing state. This command is only used to trigger a measurement except for sampling a standard waveform. Refer to Standard WAVE Subsystem commands for standard waveform test.**

**\*IDN?**

The \*IDN? query returns the PT50xx’s ID information.

Query syntax: \*IDN ?

Return format: <manufacturer>,<model>,<firmware><NL^END>

Where,

<manufacturer>      Manufacturer    (KUST Elektronik GmbH)

<model>              Model        (PT50xx)

<firmware>          Firmware    (VER2.3.7)

The \*TST command, the self-test query command, is used to execute internal self-test and read out results. For PT50xx series, the result for query report is usually “0”, which means no error.

Query syntax: \*TST?

Return format: 0<NL^END>

Where,

0 (NR1format)

For example: WrtCmd (“\*TST?”);

## Error and warning message

The bus commands may have some spelling errors, syntax errors or wrong parameters. PT50xx executes a command after the command is analyzed. If one of above errors occurs, PT50xx halts the command analysis, and the rest commands will be ignored. If a command (for example a trigger command is ignored.) is ignored, the rest commands will be executed. The error and warning messages will be displayed on the system message line.


The following table shows the common error and warning messages, which will be displayed on the message line when they occur.

Error message	Description
Unknown message!	Unknown command is received. Usually there is a spelling error in the command. For example: TRG should be TRIG DISP:PAG MEAS should be DISP:PAGE MEAS
Data out of range!	The data is out of range. For example: IVOLT 60000, the impulse voltage is out of its range.
Error parameter!	Unrecognizable parameter is used. For example: TRIG:SOUR INTER, INTER is not the correct short-form and should not used.
Error unit suffix!	Units are unrecognizable, or the units are not correct. For example: IVOLT:DEL 200us, us can not be the unit of the impulse voltage.
Data too long!	Data is too long. For example: The number of characters for a file name can not exceed 12 characters and numeric parameter, 12 characters.
File not exist!	Load a file that is not available.
Out of file range!	File number for internal memory must be between 1 and 20.
Trigger ignores!	When PT50xx is in the testing state, all trigger signals will be ignored.
Command ignores!	Some command may be ignored. For example: DISP:PAGE MSET When PT50xx is in the testing state, this command will be ignored.
Error syntax!	Error syntax, for example: IRESistance:RRANGE <high limit>.<low limit>,where (.) should be (, ) .
File already exist!	The input file already exists. For example: MMEM:STOR:STAT2, PT50xx, if file 2 already exists, this error message will pop up.

# Chapter 9 Handler interface

## Basic information

The handler interface employs a 9-pin DB connector. Pin sequence is as follow.

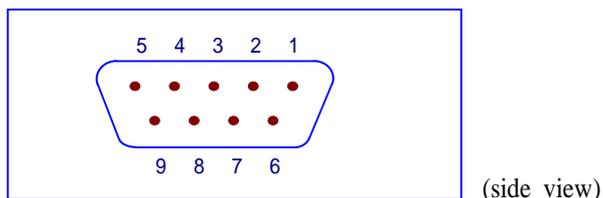

The signal definitions for each pin are described as follows:

① **Note: The / (back slash) in the signal name means that the signal is asserted when low level**

PIN ① EXGND: Common for external voltage source EXV.

When PT50xx series uses the internal voltage as the power supply for handler interface, PT50xx series' circuit common will be connected to EXTEND.

PIN ② /EOC: End of conversion.

/EOC signal is asserted when the A/D conversion is completed and PT50xx series is ready for the next DUT to be connected to the test terminals. The measurement data, however, is not valid until BUSY is asserted to low.

PIN ③ BUSY: PT50xx series is in the test state. When calculation, comparison and display are all completed, this signal is asserted to low.

PIN ④ /PASS: Pass signal output.

PIN ⑤ /FAIL: Fail signal output.

PIN ⑥ EXV: External DC voltage

DC voltage supply pins for DC isolated collector outputs, /EOC, /START, /STOP, /PASS, /FAIL, /EOM. The setting of internal jumpers must be changed when using the internal voltage supply.

PIN ⑦ /START: External trigger signal.

PT50xx series is triggered on the rising edge of a pulse applied to this pin when the trigger mode is set to EXT mode.


PIN ⑧ /STOP: External stop signal

Test is interrupted on the rising edge of a pulse applied to this pin.

PIN ⑨ VCC: Internal voltage source supply (+5V)

Internal source is not recommended for user to use. Make sure the current is lower than 0.1 A and keep the signal line away from interference source

when use.

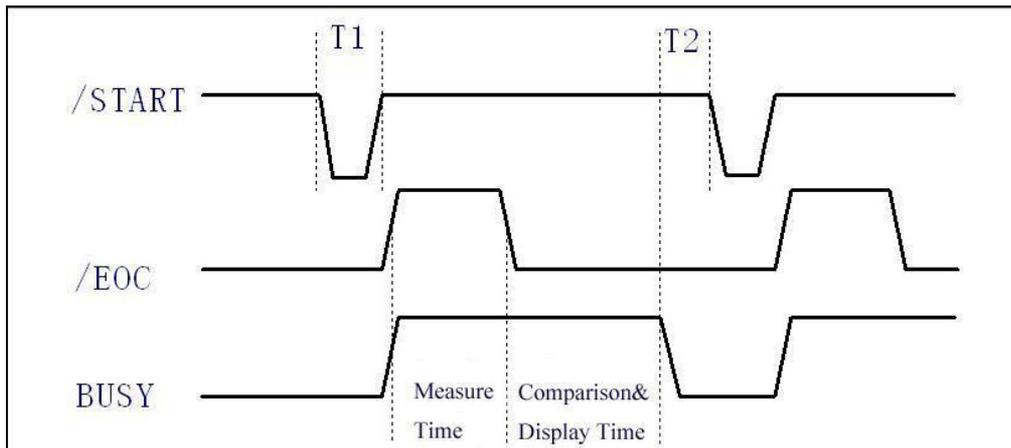

The timing diagram for handler interface is displayed in above figure, T1 is the trigger pulse width and the minimum pulse width is 1 us. T2 is the delay time, after the foregoing measurement completed to next trigger signal; its minimum pulse width is 0 us. /PASS and /FAIL signals are asserted after the measurement completed, till next trigger. The request of the /STOP pulse signal is the same as /START pulse signal.

### Electrical characteristics

#### DC isolated output

Each DC output (pins 2 through 5) is the collector output of the built-in pull-up resistor and isolated by an opto-coupler. The output voltage of each line is set by a pull-up resistor on the handler interface board. The pull-up resistors can be connected to the internally supplied voltage (+5V), or to an externally applied voltage (EXV: +5V to +24V) by setting jumpers. Table 9-1 shows the electrical characteristics of the DC isolated outputs.

Output signal	Voltage output rating		Maximum current	Circuit common
	Low	High		
/EOC BUSY /PASS /FAIL	≤0.5V	+5V~ +24V	6mA	Internal pull-up voltage: PT50xx series circuit common GND External voltage (EXV): EXGND

Table 9-1 DC isolated output electrical characteristics

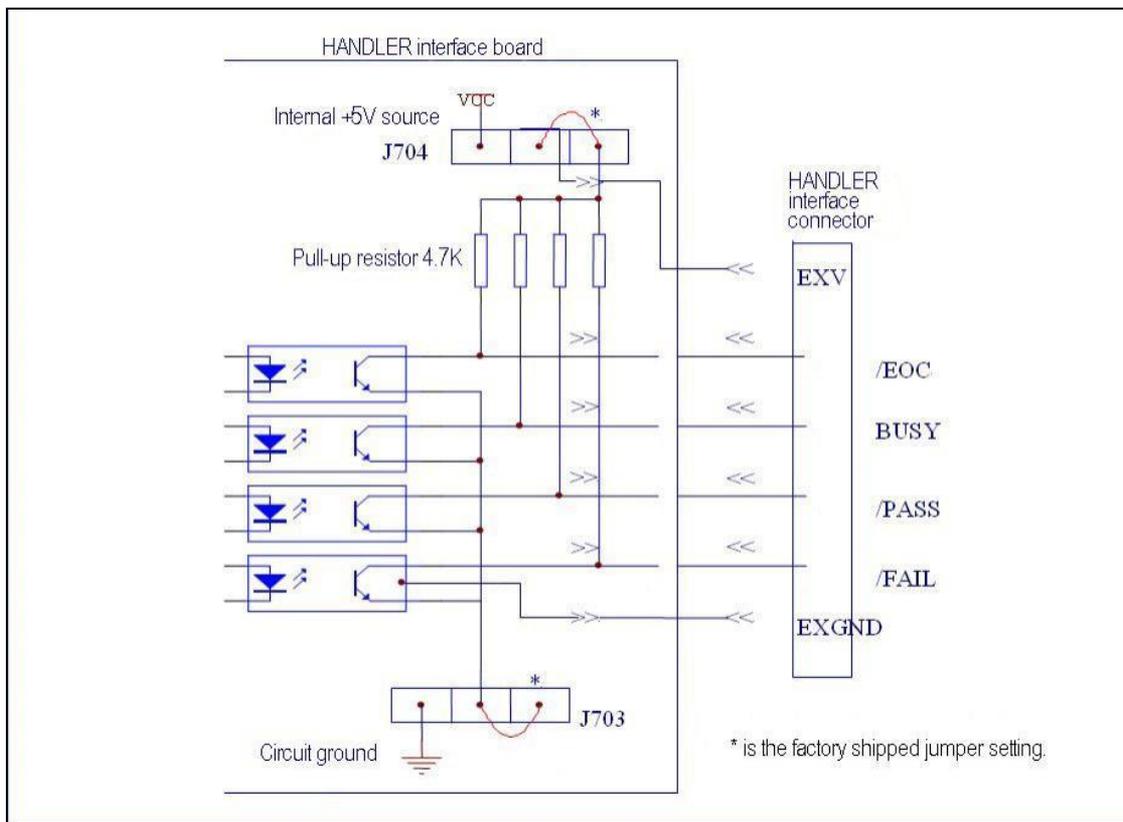


Figure 9-1 Simplified diagram of the output signals

A simplified diagram of the output signals is shown in Figure 9-1. \* is the default jumper setting when shipped from factory. That is to say, the default jumper setting is to use external voltage source.

Refer to the next section Jumper Setup.

### Isolated input

The /START signal (pin 7) and the /STOP signal (pin 8) are connected to the cathode of the LED in an opto-coupler. PT50xx series is triggered on the rising edge of the /START pulse and stopped on the rising edge of the /STOP pulse. The anode of the LED can be connected to the internal +5V, or an external voltage source EXV (the same external voltage source used for output signal).

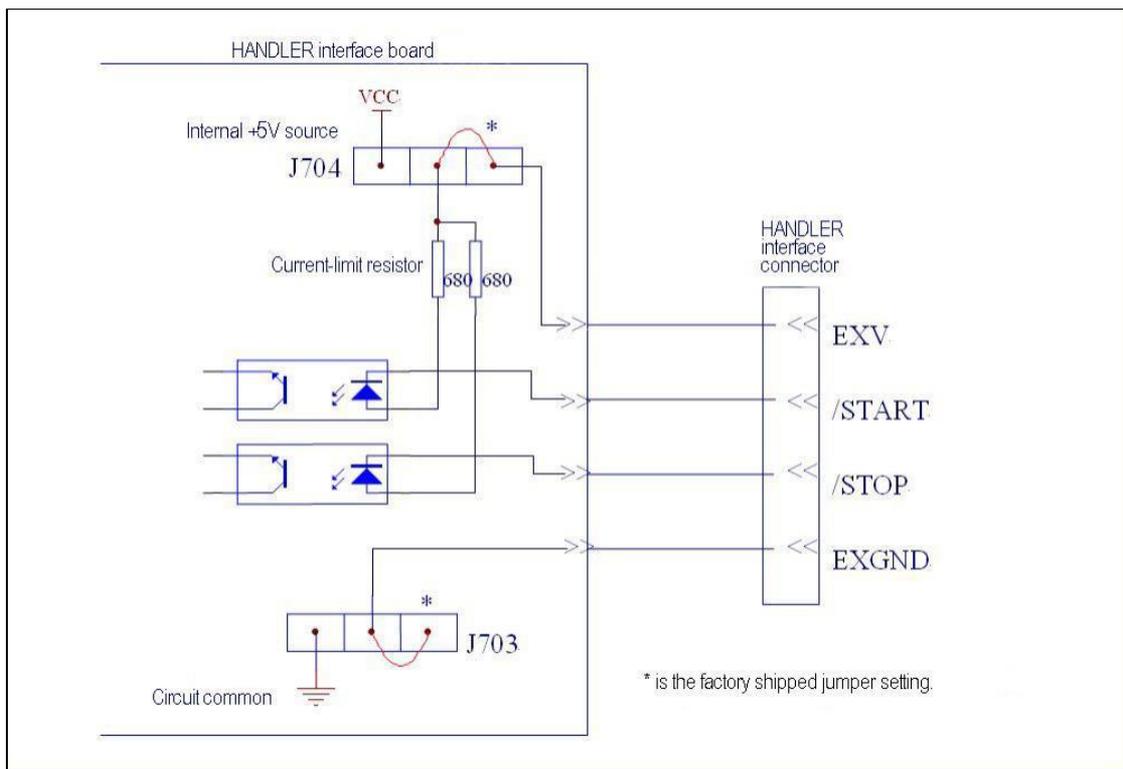


Figure 9-2 Simplified diagram of the input signal

In figure 9-2, the default jumper setting is to use external voltage source. Actually, the input signals and the output signals use the external voltage source together. The Current-limit resistor is used to limit the current and the default resistor is only suitable for external voltage source range from 5V to 8V. If the external voltage source is higher than 8V, you should replace the Current-limit resistor to avoid damaging circuit components. Current-limit resistor R705 and R706 should be both replaced. The detailed replacement information about Current-limit resistor is listed in table 9-2.

Current-limit resistor	Range of external voltage source
680Ω	5V to 8V
1.2KΩ	8V to 15V
2.2KΩ	15V to 24V

Table 9-2 Current-limit resistor for different voltage

### Jumper setup on HANDLER interface

There are two jumpers on the Handler interface board. The two jumpers are used to select the internal voltage source for external voltage source for the output signal and input signal. Their locations are shown in figure 9-3.

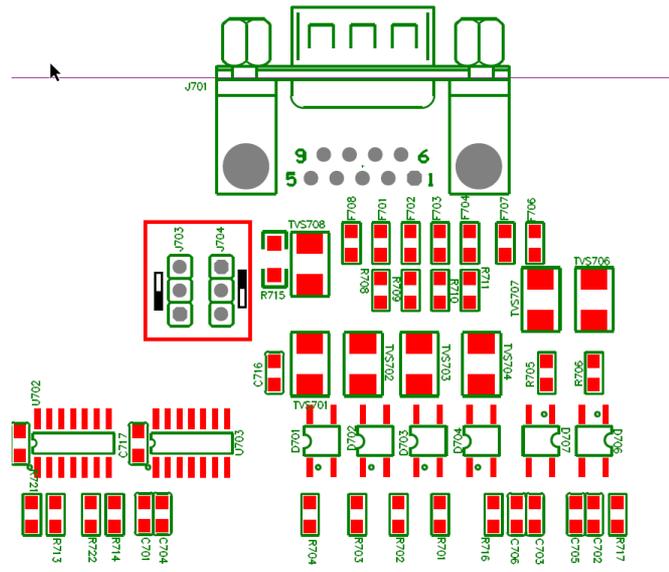


Figure 9-3 Jumper position on the Handler interface board

As above figure shown, when shipped from the factory, both jumpers are set at the upper position. If you want to apply the internal power supply, you must set both jumpers at the lower position. Likewise, when using external power supply to substitute the internal power supply, the two jumpers should be set at the same time.

**ⓘ Warning: Make sure the instrument has been powered off and the plug has been removed before opening the case to alter jumper setting.**

# Chapter 10 Package contents and warranty

## Package contents

Following items should be contained in the package.

Serial number	Name	Quantity
1	PT50xx Impulse Winding Tester	1
2	KA1017 High-voltage Test clip leads	1
3	KA1027 Foot Switch	1
4	Three-wire power line	1
5	Fuse of 1A	1
6	Operational Manual	1
7	Manufacturer Certificate	1
8	Test Report	1
9	Warranty Card	1

Verify that you have received all above items and any optional accessories you may have ordered. If any one is missing, please contact us without delay.

## Warranty

This KUST Elektronik GmbH instrument product is warranted against defects in material and workmanship for a period of two years from the date of shipment. You should supply us with the warranty card before you enjoy the free maintenance service. This warranty does not apply in the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs. KUST Elektronik GmbH will, without charge, repair or replace, at its option, defective product or component parts.

The maintenance for this instrument should be performed by professional maintenance personnel. Do not substitute the internal components unauthorized when maintaining. In order to ensure the measurement accuracy, the instrument must be measured and corrected after maintenance. You should bear the maintenance expense for damages caused by unauthorized repairing or substituting components.

The instrument should not be placed in the environment present direct sunlight and moisture.

Place the instrument in the original package box if you do not use it for a long time.

**NOTES:**